

1965 RAMBLER AMBASSADOR & CLASSIC

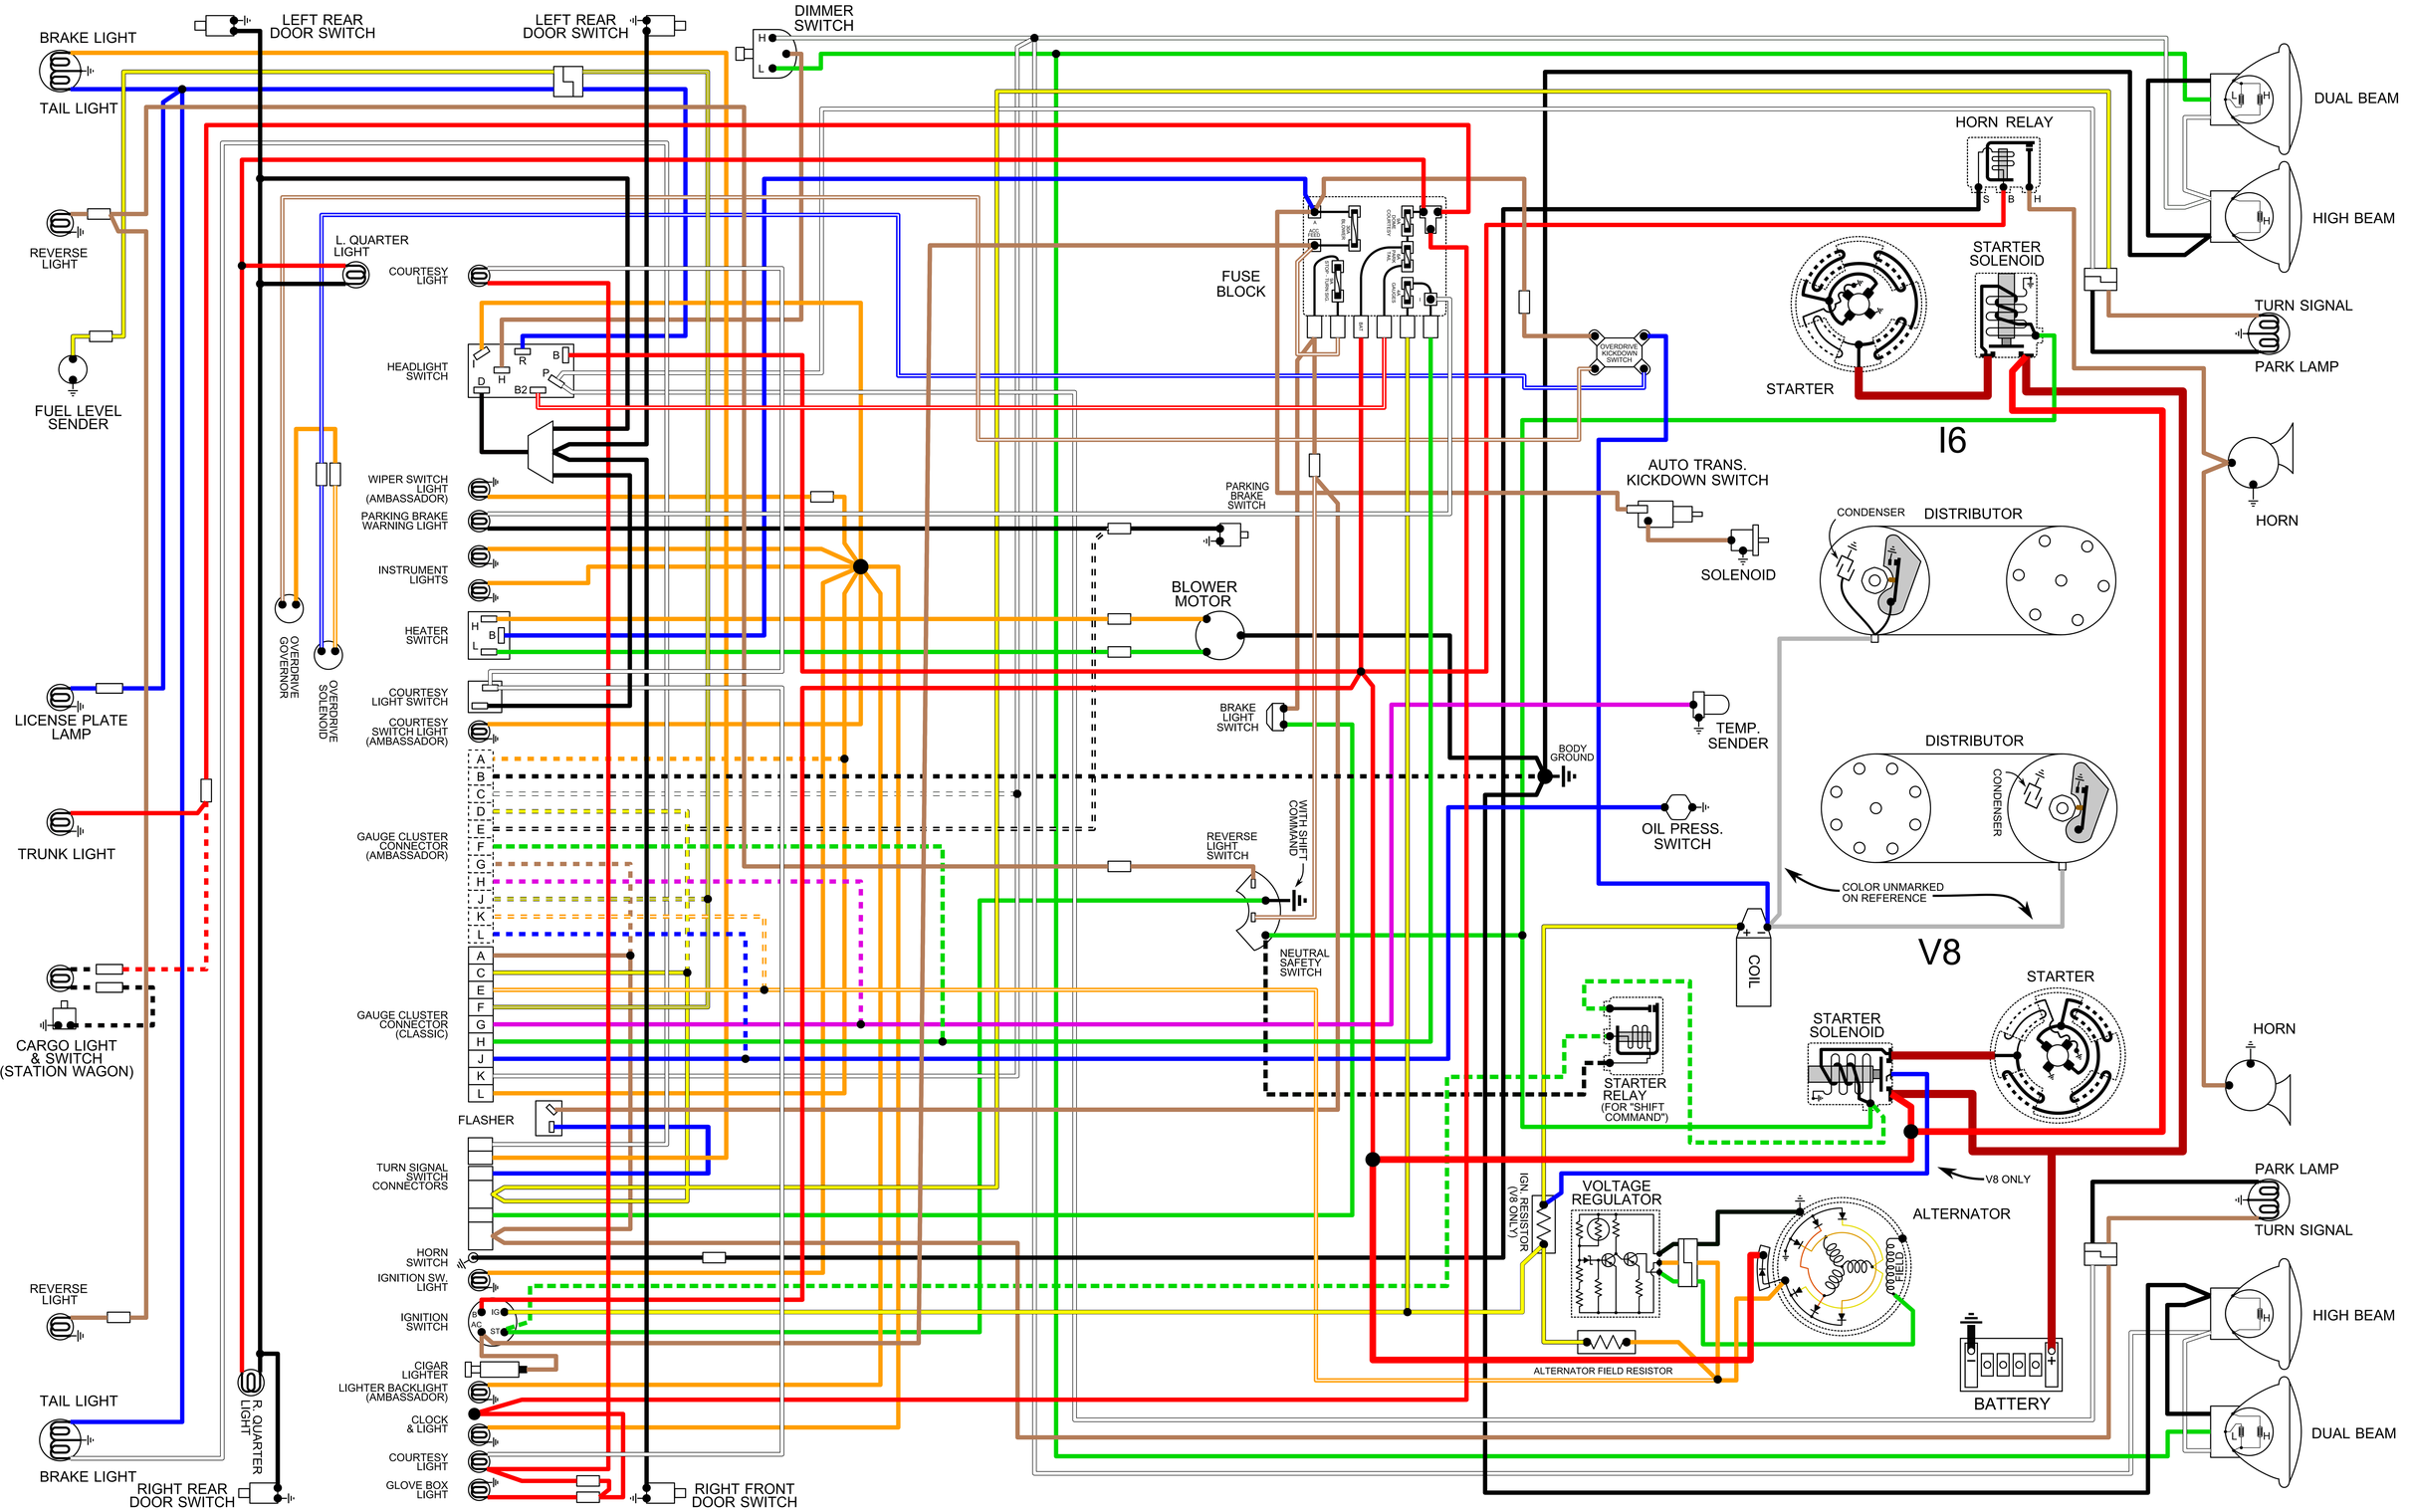


CINCO

1965 RAMBLER AMBASSADOR & CLASSIC

MAIN POWER

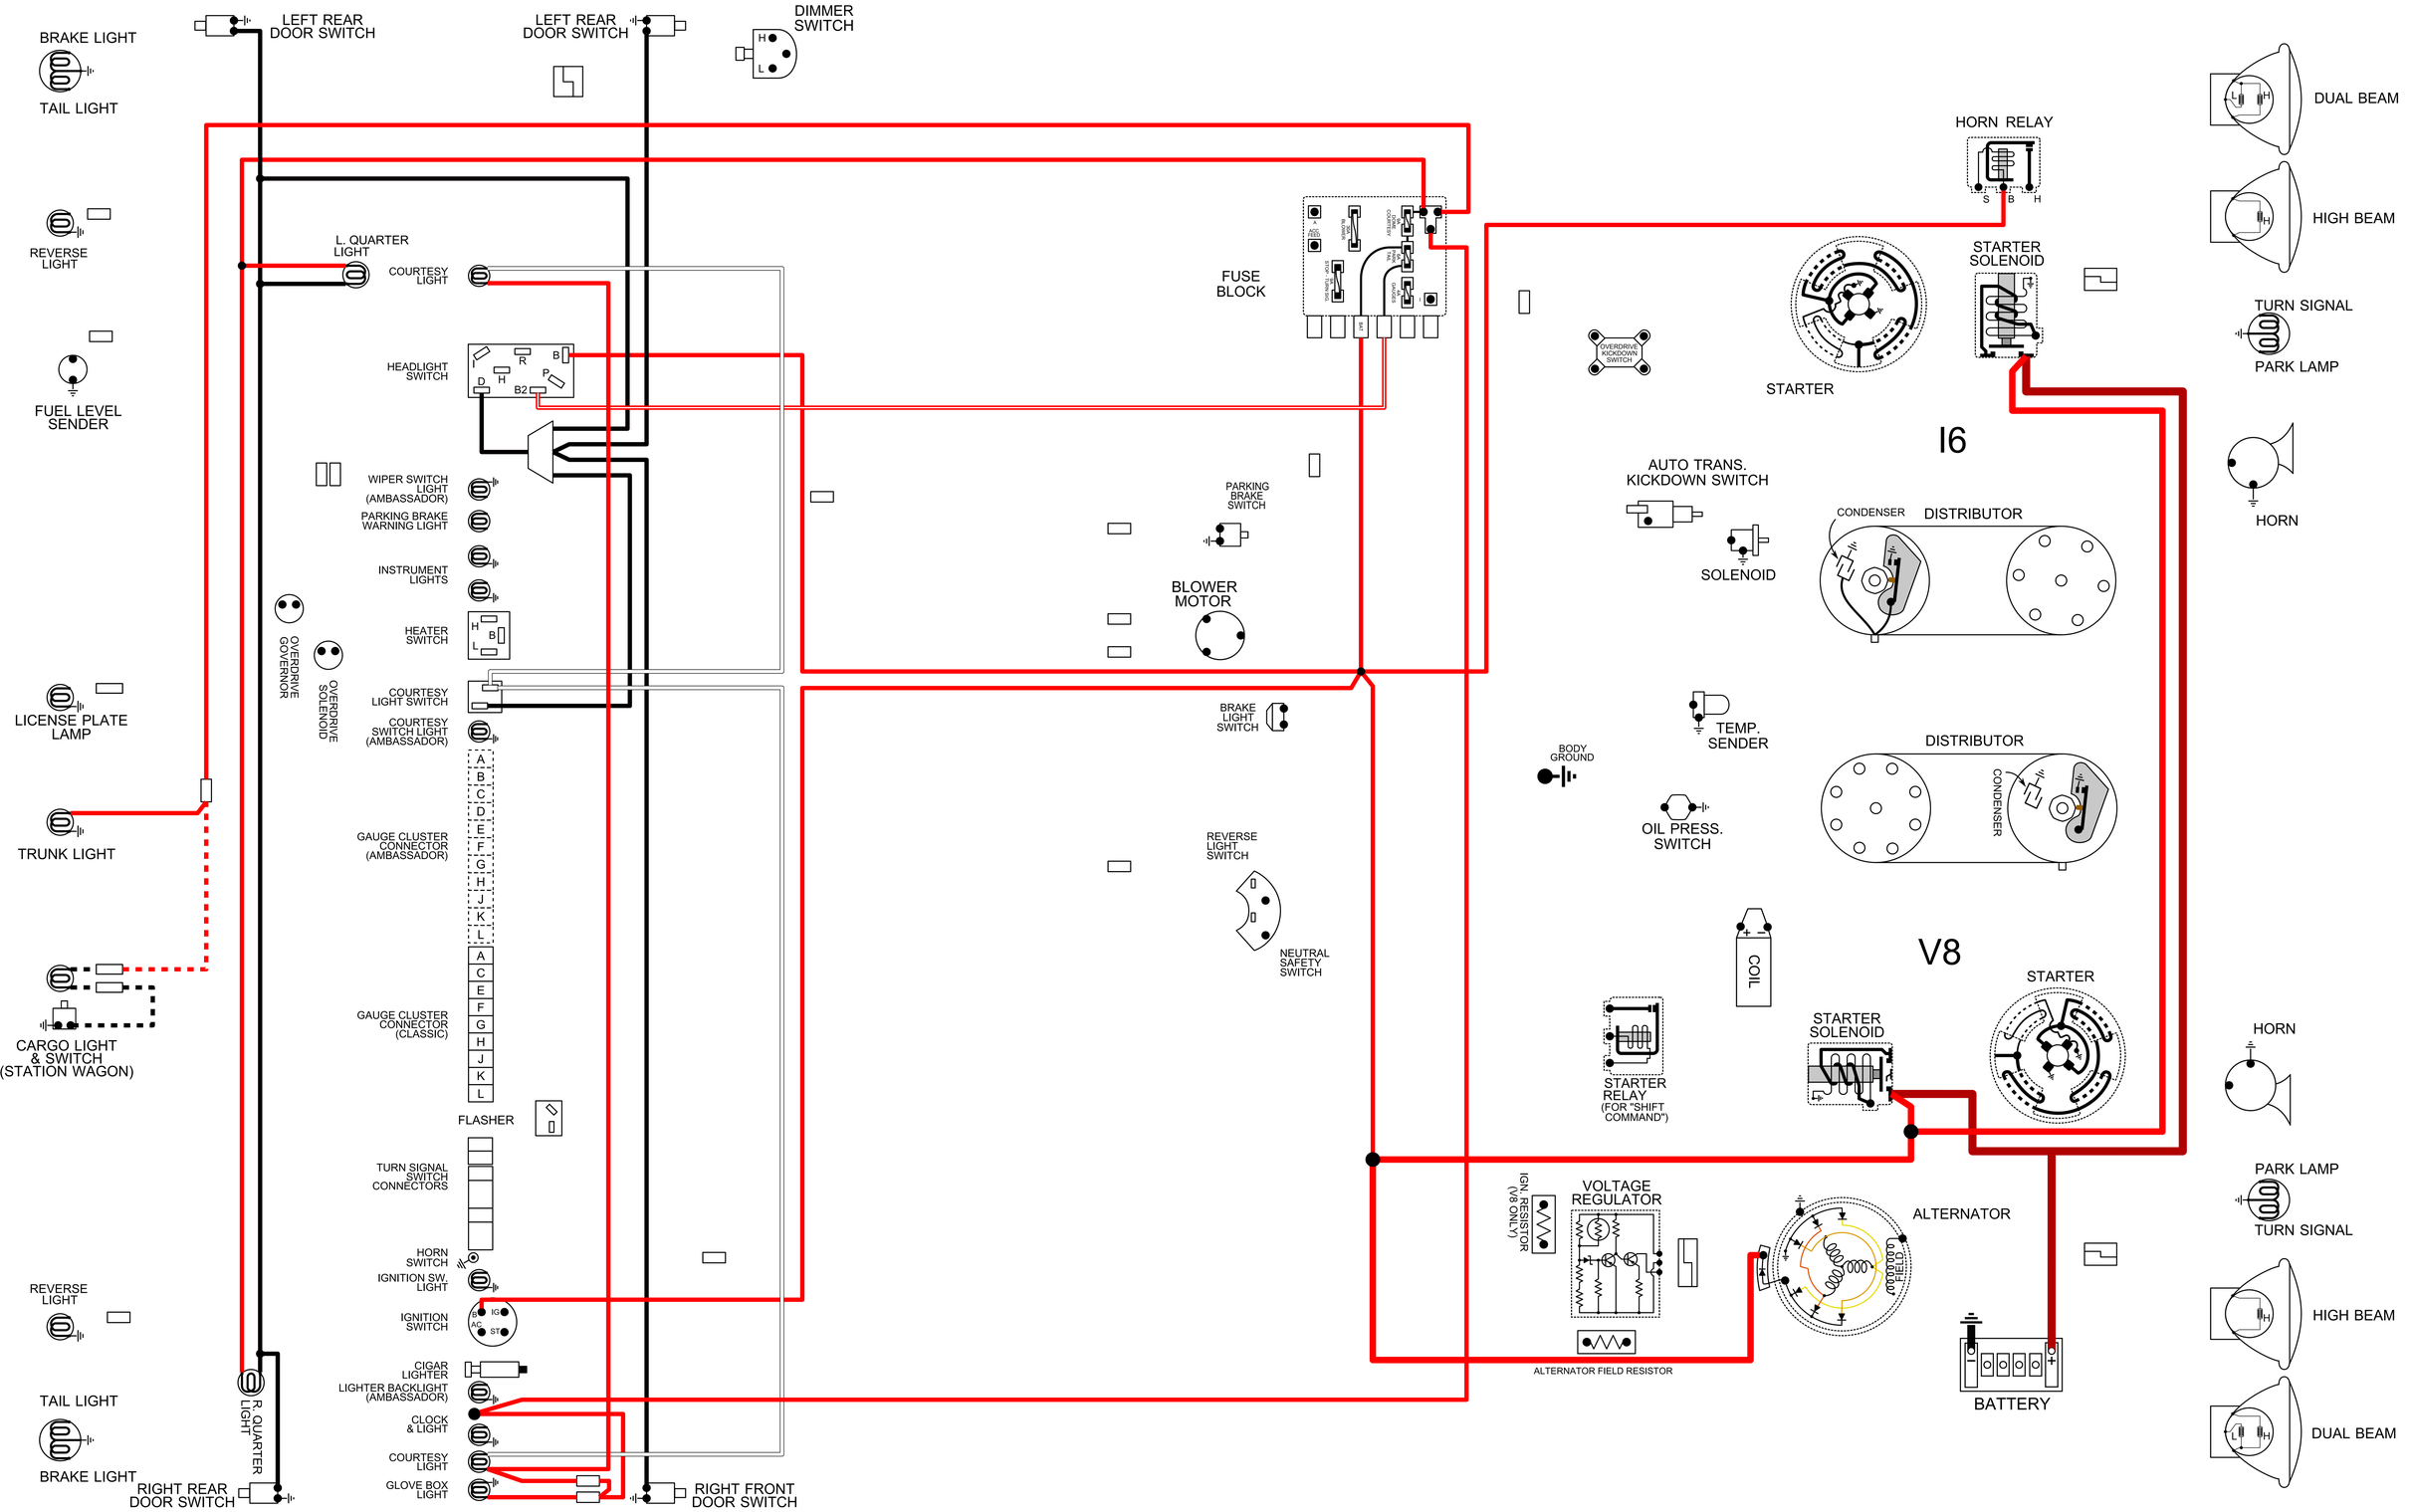


1965 RAMBLER AMBASSADOR & CLASSIC
ACCESSORY POWER

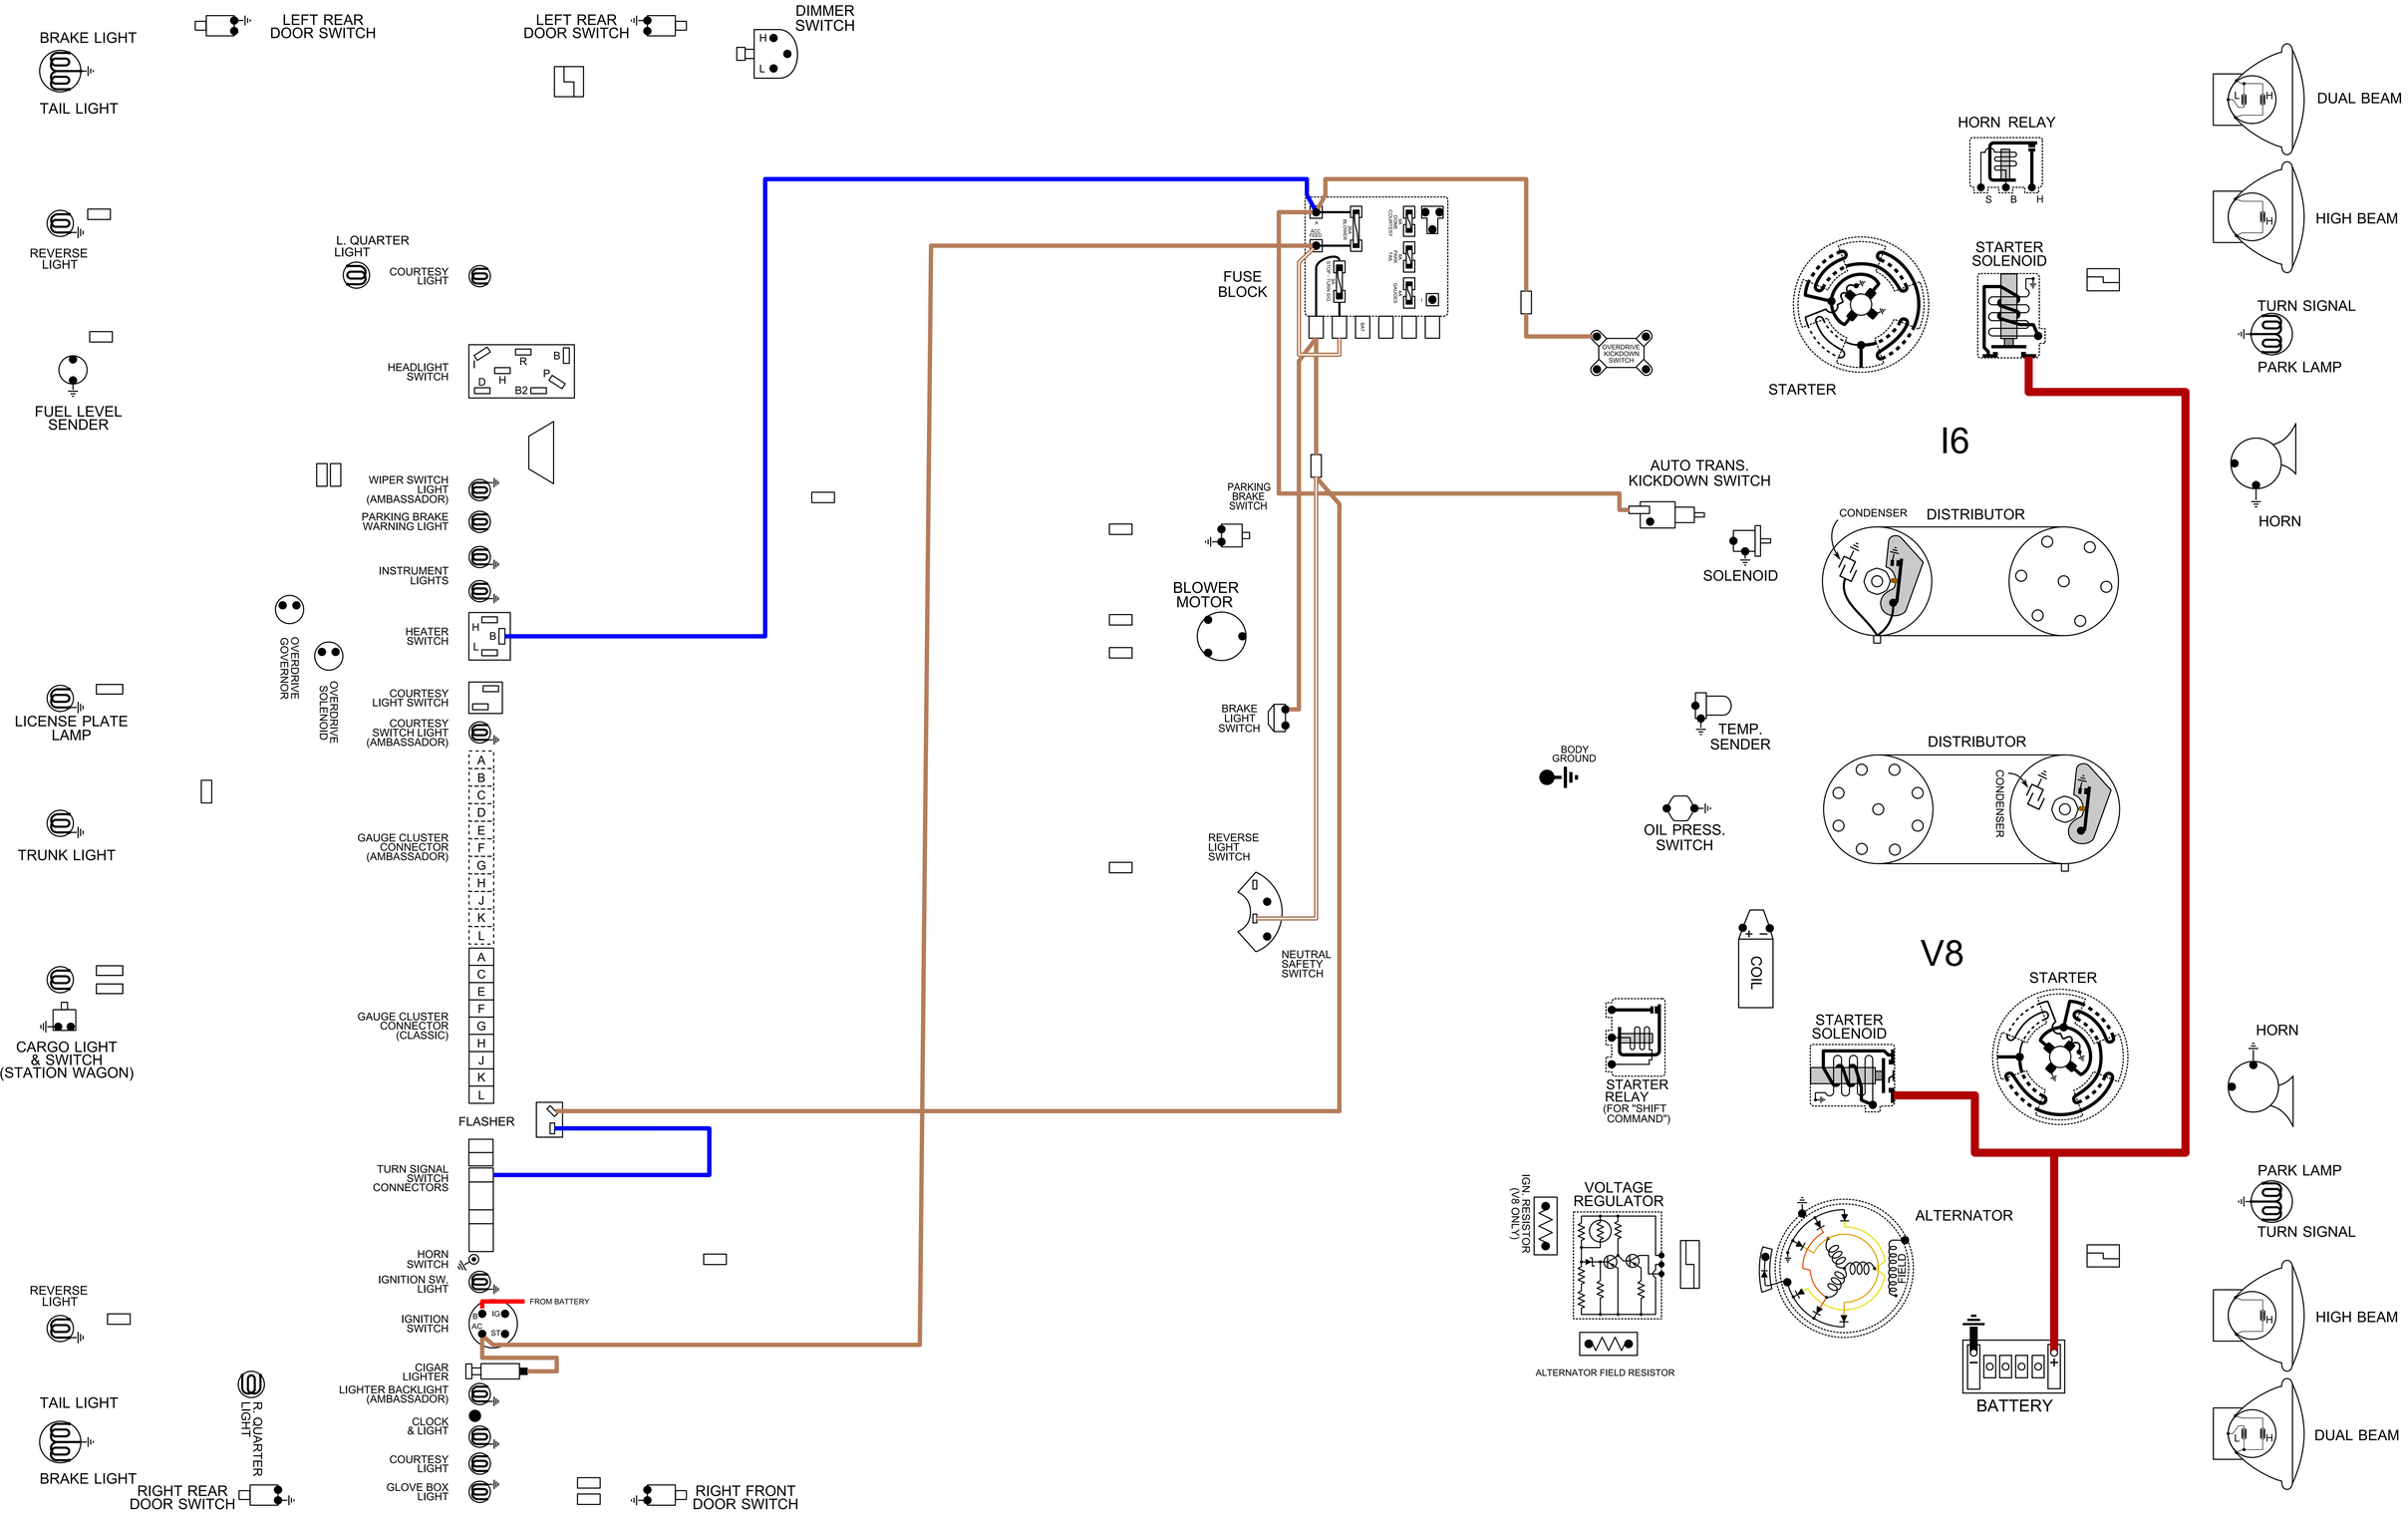


CINCO

1965 RAMBLER AMBASSADOR & CLASSIC
IGNITION SYSTEM

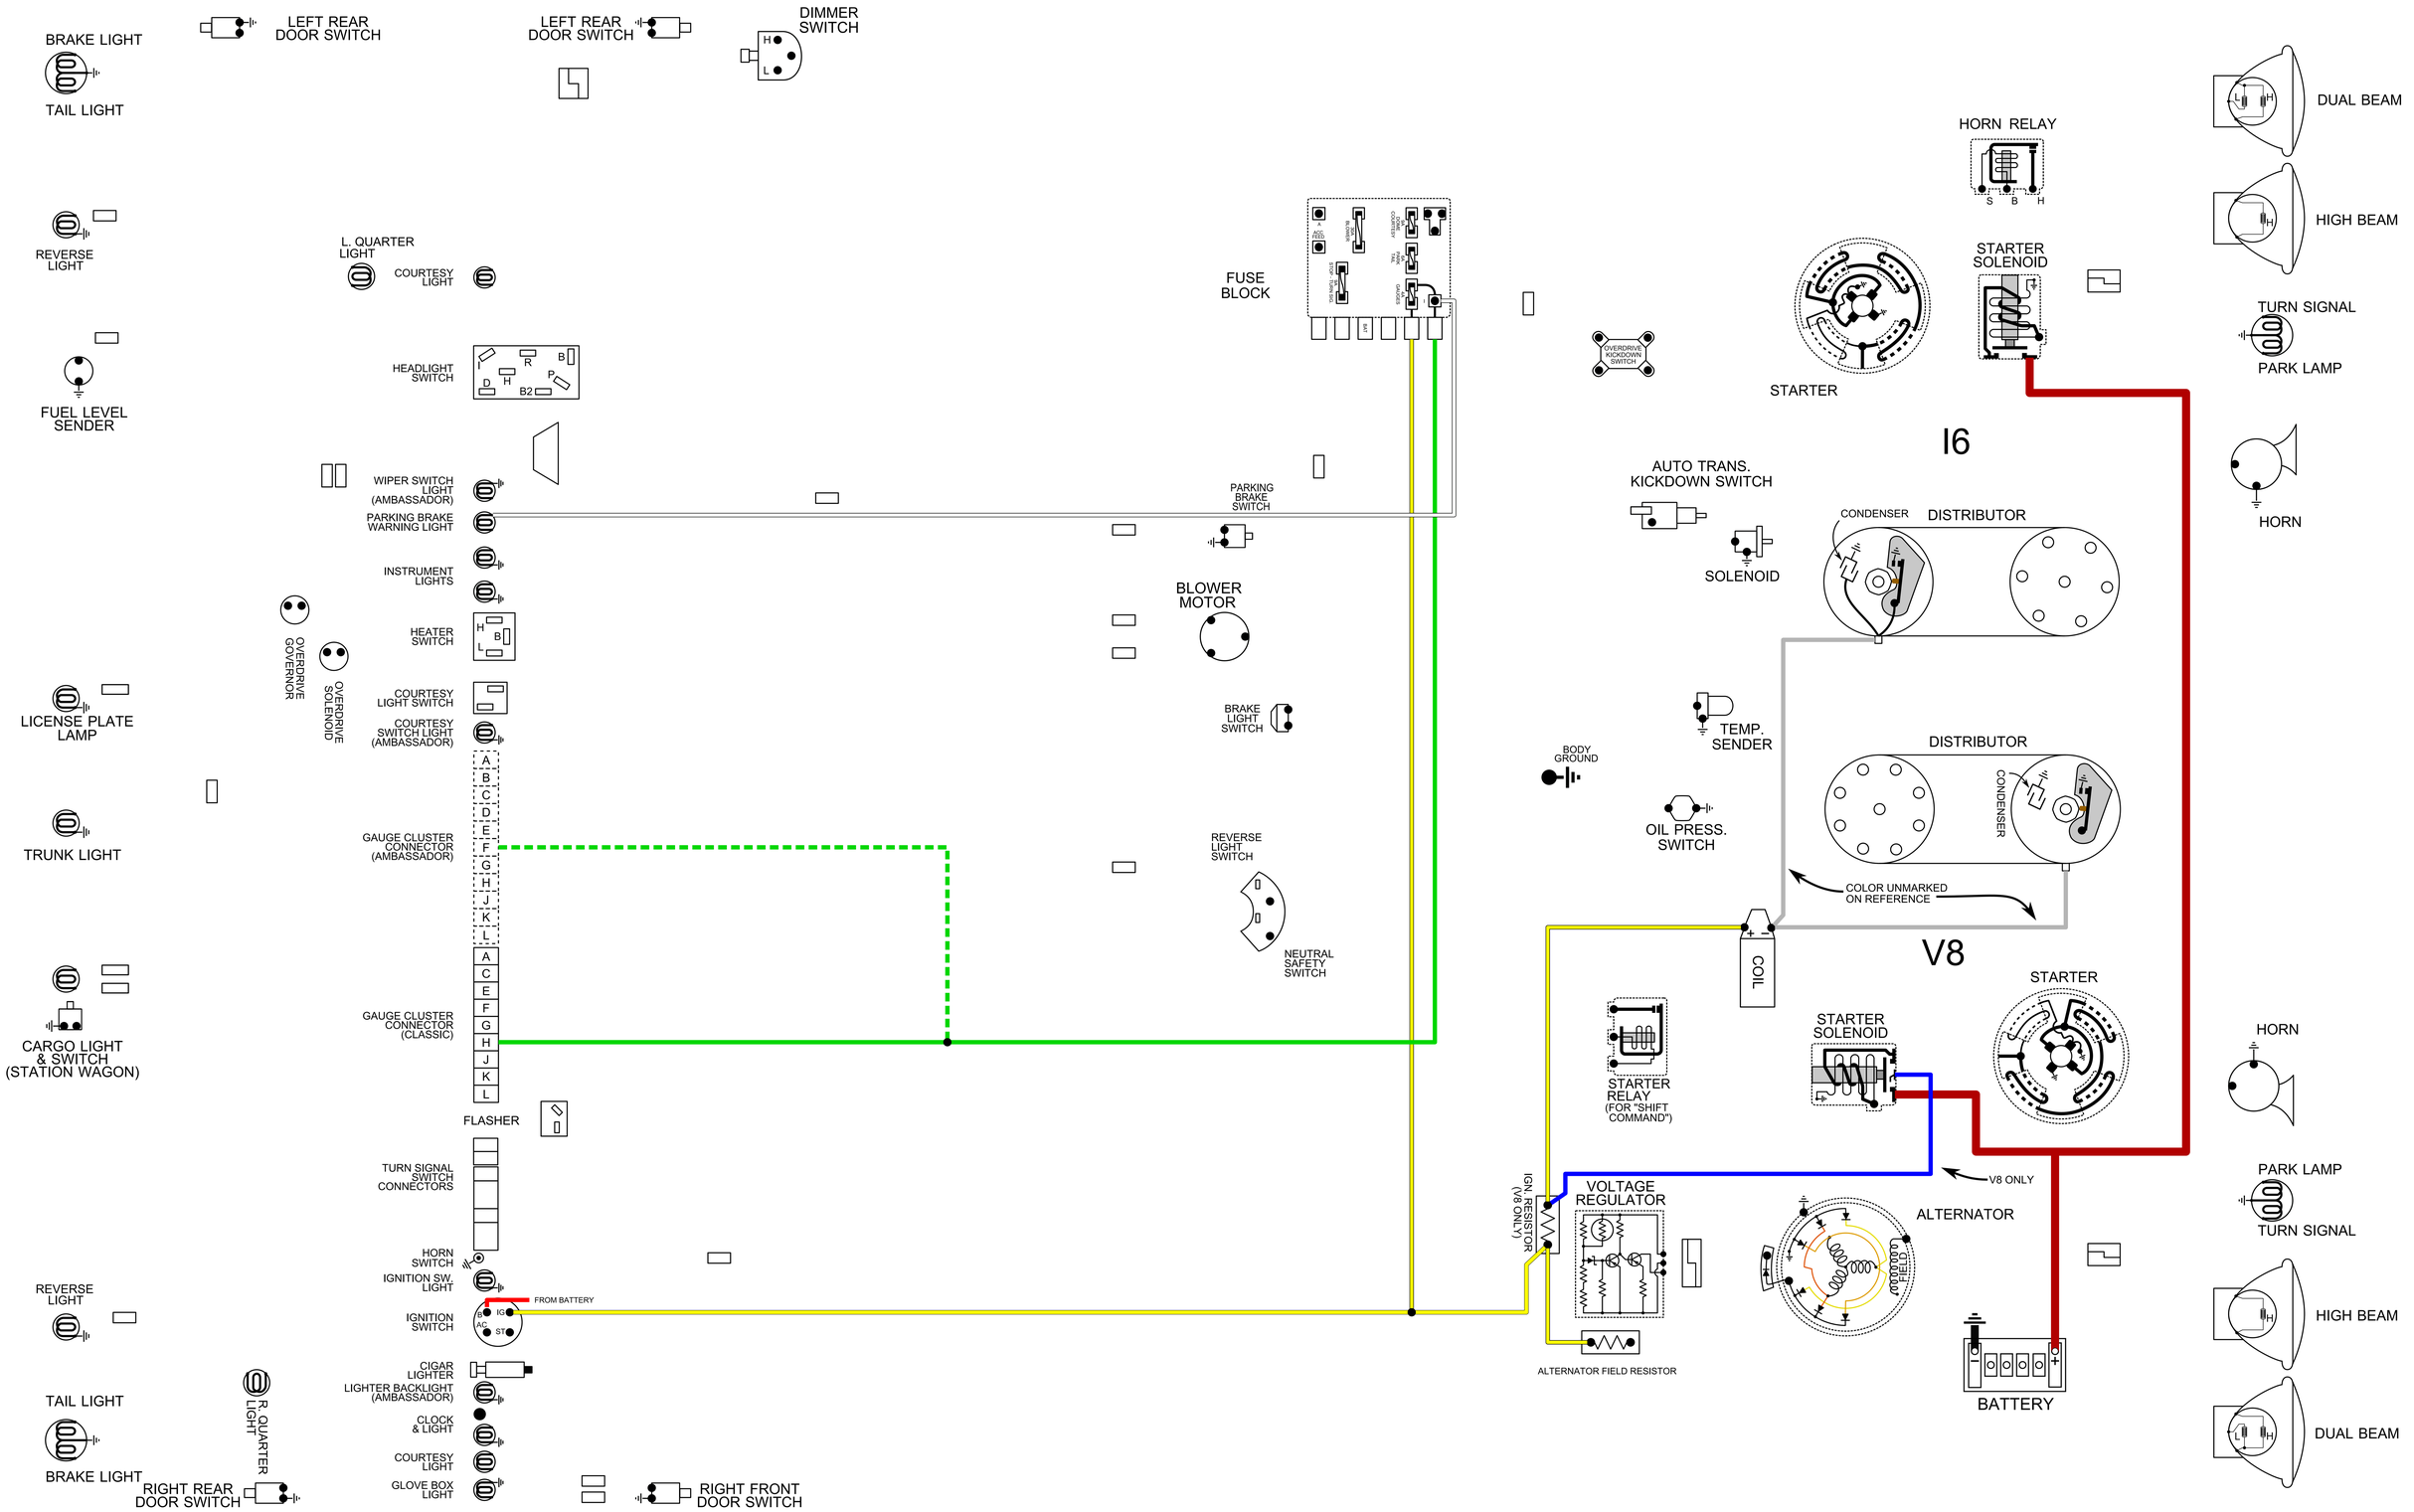

CINCO

1965 RAMBLER AMBASSADOR & CLASSIC
STARTING SYSTEM

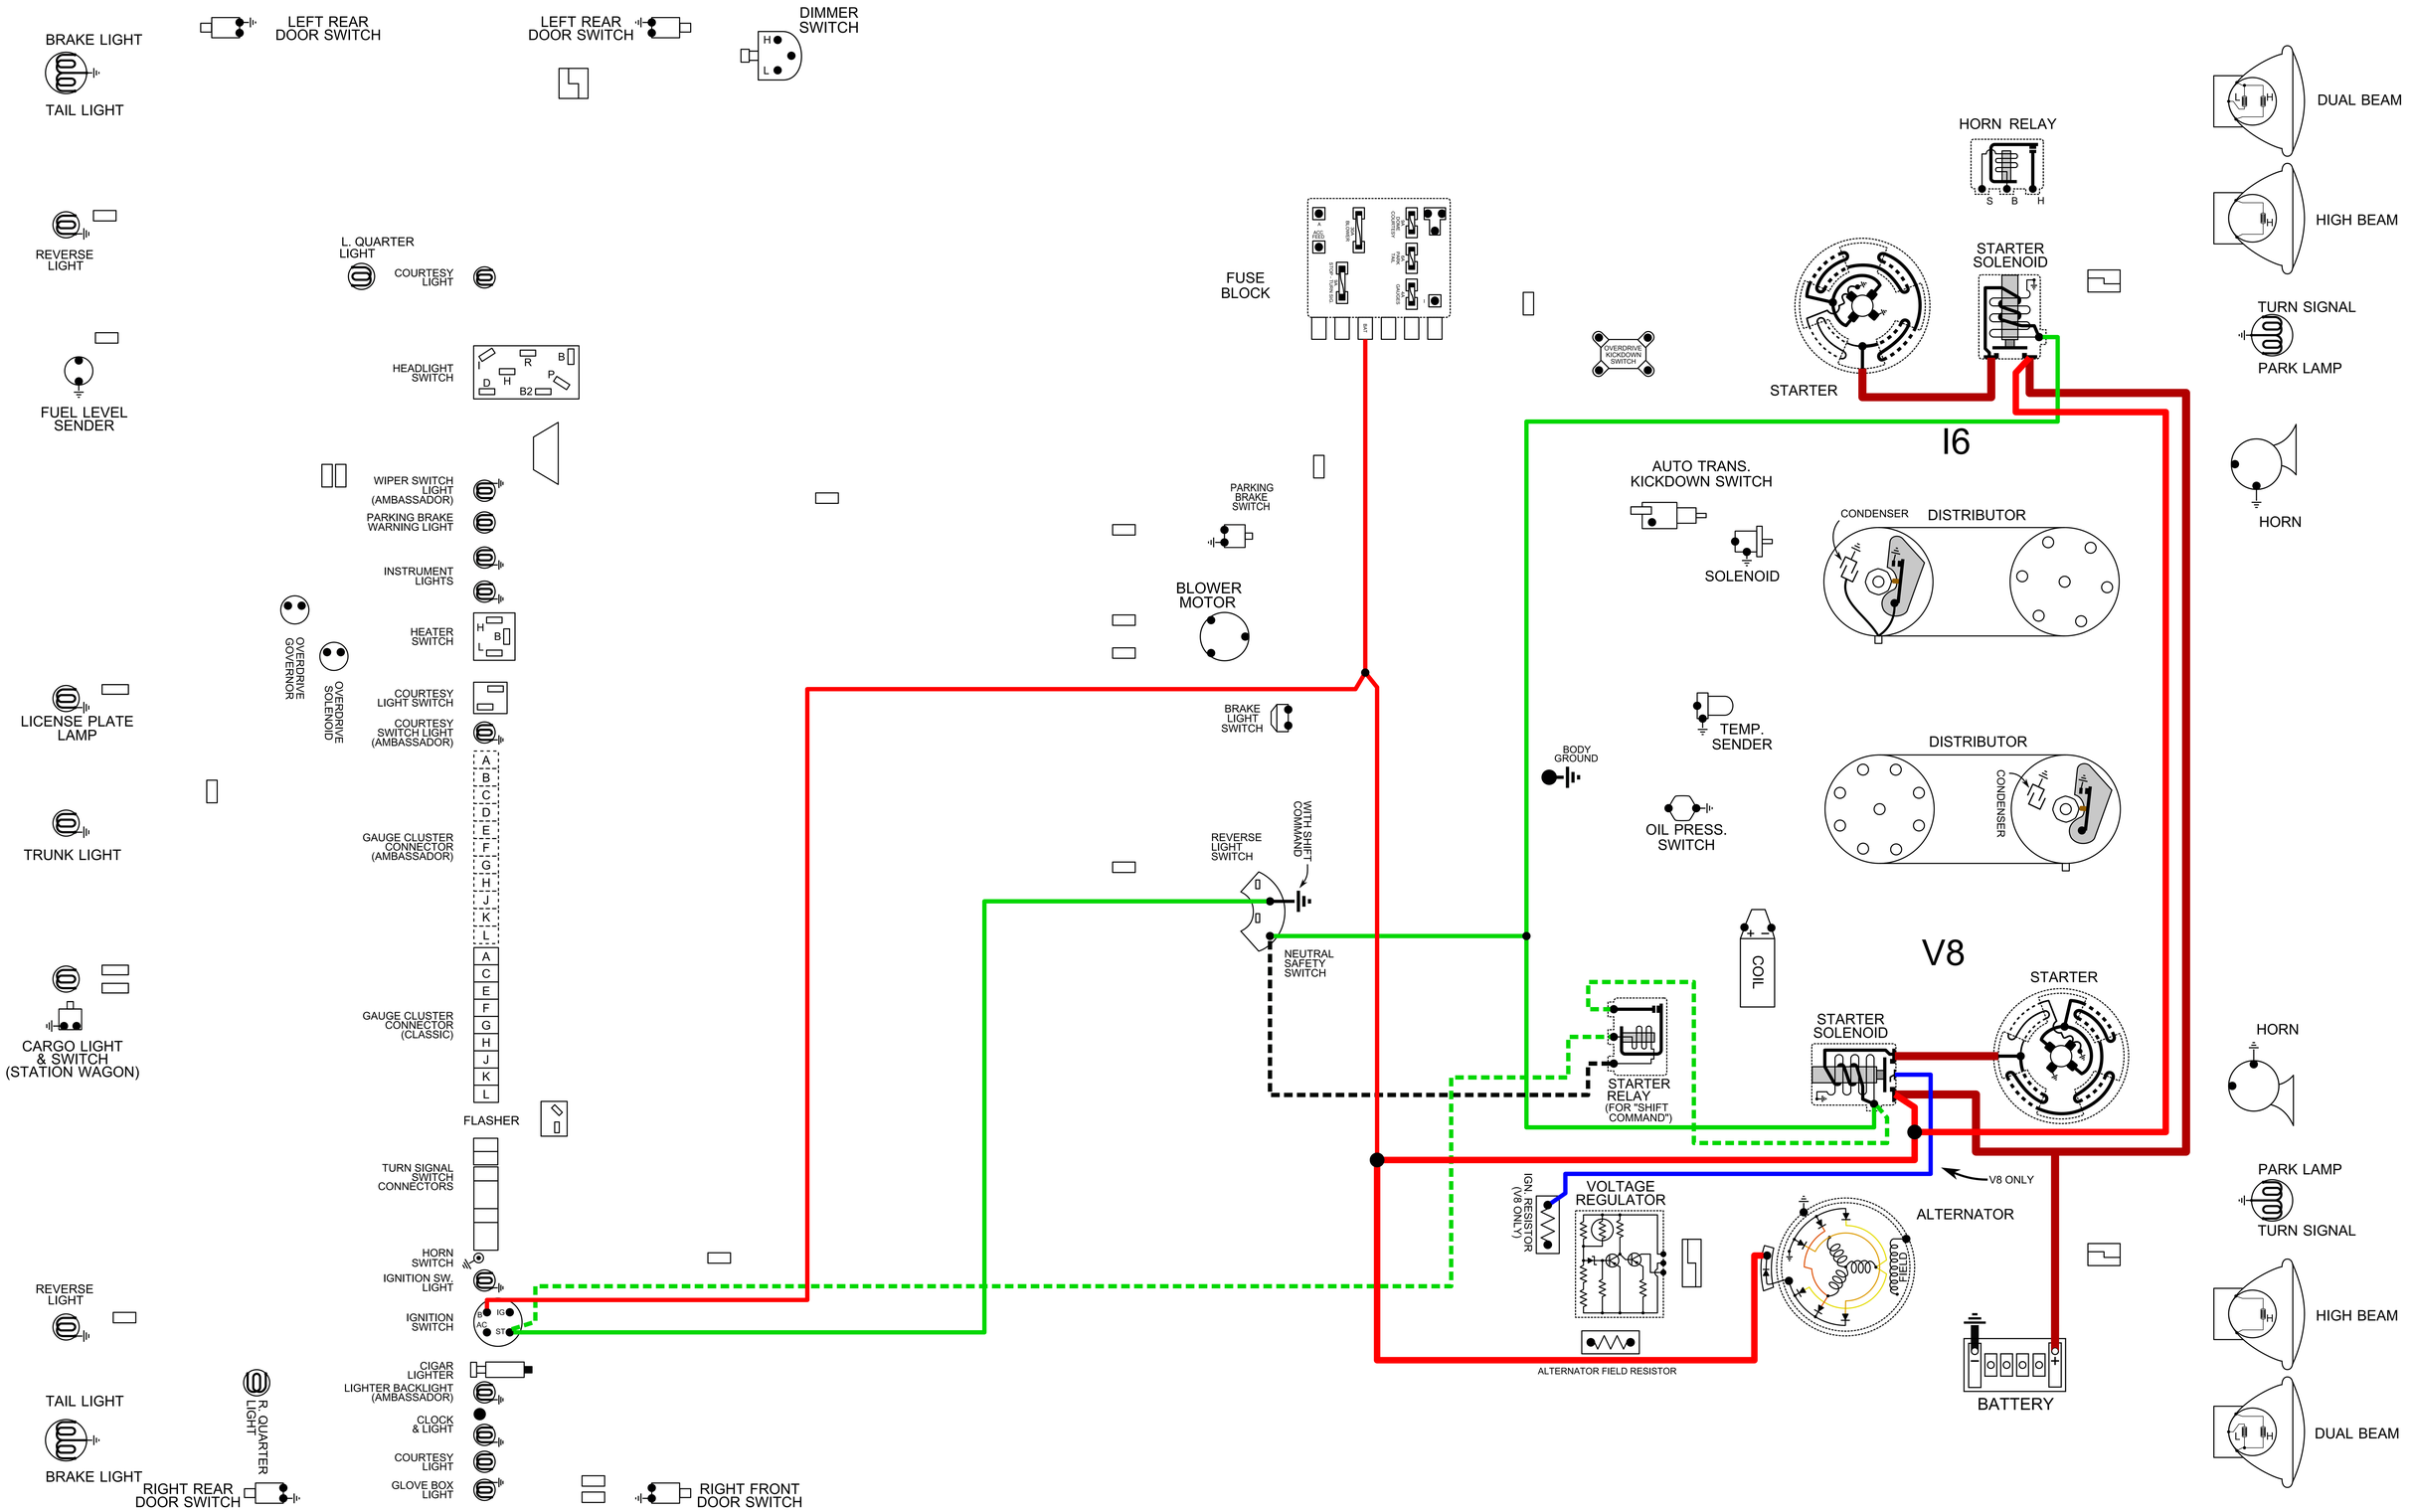

CINCO


1965 RAMBLER AMBASSADOR & CLASSIC
CHARGING SYSTEM

BRAKE LIGHT
TAIL LIGHT
LEFT REAR DOOR SWITCH
LEFT REAR DOOR SWITCH
DIMMER SWITCH
REVERSE LIGHT
FUEL LEVEL SENDER
L. QUARTER LIGHT
COURTESY LIGHT
HEADLIGHT SWITCH
WIPER SWITCH
LIGHT (AMBASSADOR)
PARKING BRAKE WARNING LIGHT
INSTRUMENT LIGHTS
HEATER SWITCH
OVERDRIVE GOVERNOR
OVERDRIVE SOLENOID
COURTESY LIGHT SWITCH
COURTESY SWITCH LIGHT (AMBASSADOR)
LICENSE PLATE LAMP
TRUNK LIGHT
GAUGE CLUSTER CONNECTOR (AMBASSADOR)
CARGO LIGHT & SWITCH (STATION WAGON)
GAUGE CLUSTER CONNECTOR (CLASSIC)
FLASHER
TURN SIGNAL SWITCH CONNECTORS
HORN SWITCH
IGNITION SW. LIGHT
IGNITION SWITCH
CIGAR LIGHTER
LIGHTER BACKLIGHT (AMBASSADOR)
CLOCK & LIGHT
COURTESY LIGHT
GLOVE BOX LIGHT
REVERSE LIGHT
TAIL LIGHT
BRAKE LIGHT
R. QUARTER LIGHT
RIGHT REAR DOOR SWITCH
RIGHT FRONT DOOR SWITCH
FUSE BLOCK
PARKING BRAKE SWITCH
BLOWER MOTOR
BRAKE LIGHT SWITCH
REVERSE LIGHT SWITCH
NEUTRAL SAFETY SWITCH
OVERDRIVE KICKDOWN SWITCH
HORN RELAY
STARTER
STARTER SOLENOID
DUAL BEAM
HIGH BEAM
TURN SIGNAL
PARK LAMP
HORN
I6
AUTO TRANS. KICKDOWN SWITCH
SOLENOID
CONDENSER
DISTRIBUTOR
TEMP. SENDER
BODY GROUND
OIL PRESS. SWITCH
V8
COIL
STARTER
STARTER SOLENOID
STARTER RELAY (FOR "SHIFT COMMAND")
HORN
PARK LAMP
TURN SIGNAL
HIGH BEAM
DUAL BEAM
VOLTAGE REGULATOR
IGN. RESISTOR (V8 ONLY)
ALTERNATOR
ALTERNATOR FIELD RESISTOR
BATTERY

CINCO

1965 RAMBLER AMBASSADOR & CLASSIC


HEADLIGHTS

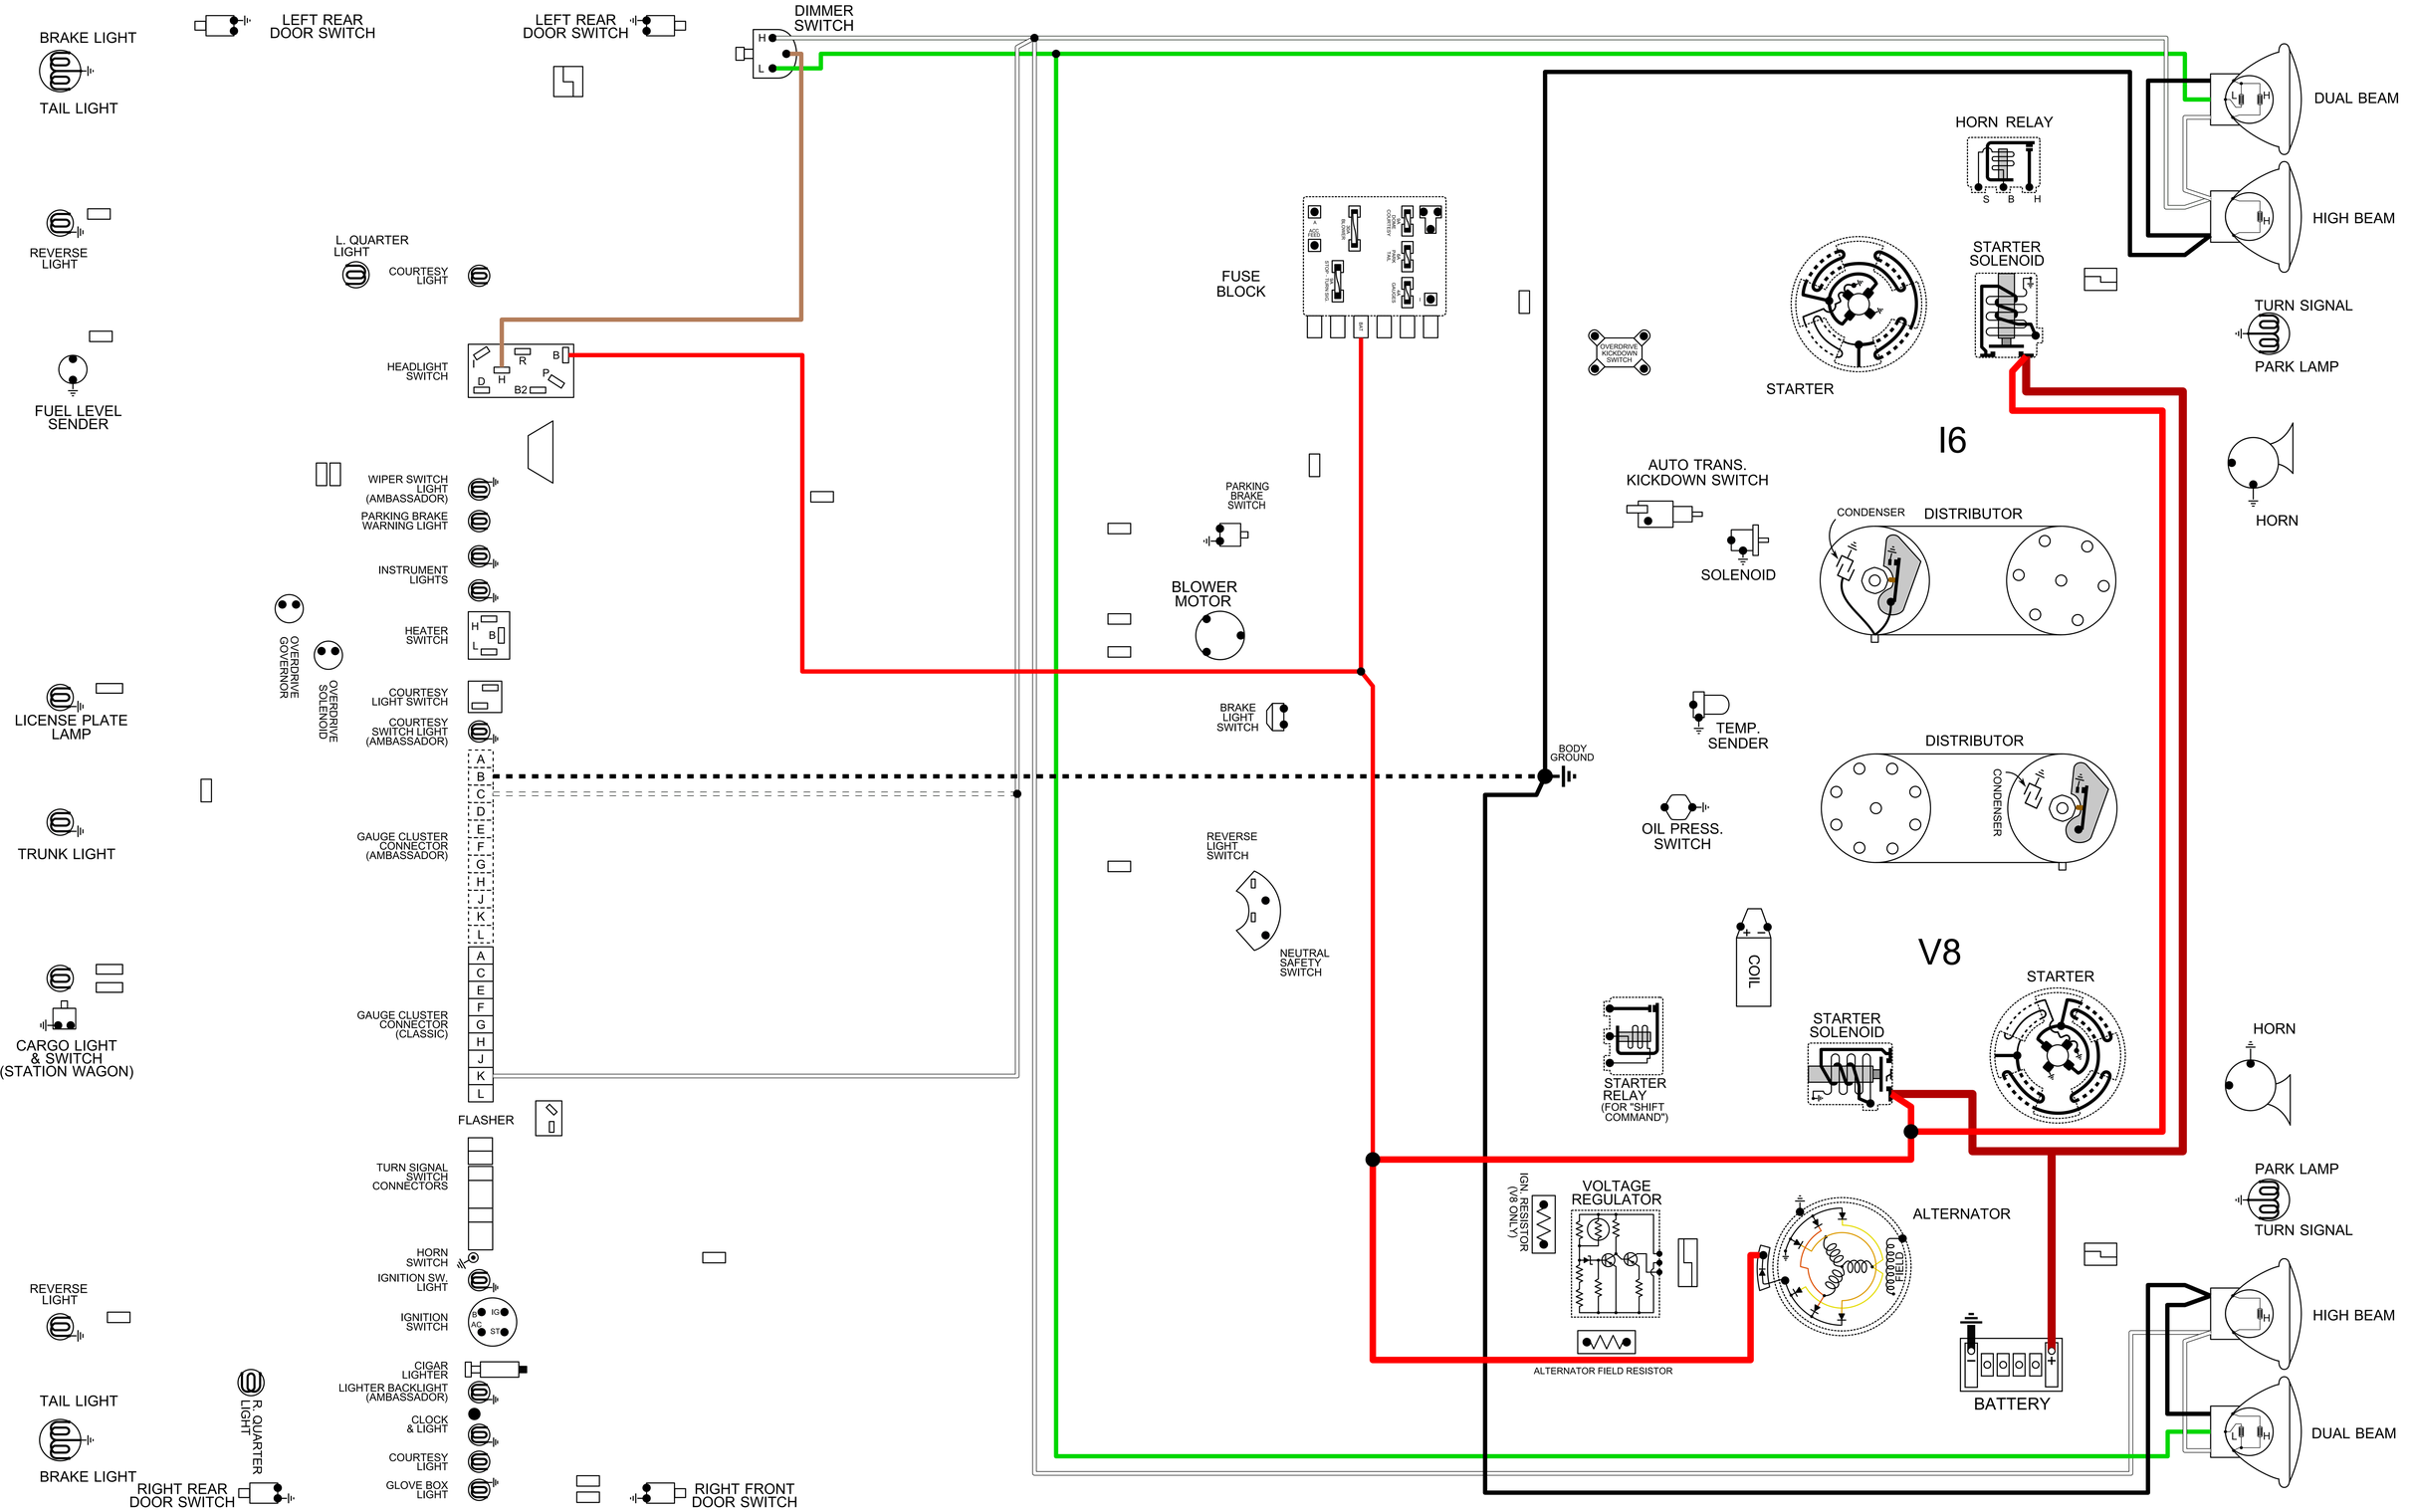

CINCO

1965 RAMBLER AMBASSADOR & CLASSIC


RUNNING LIGHTS

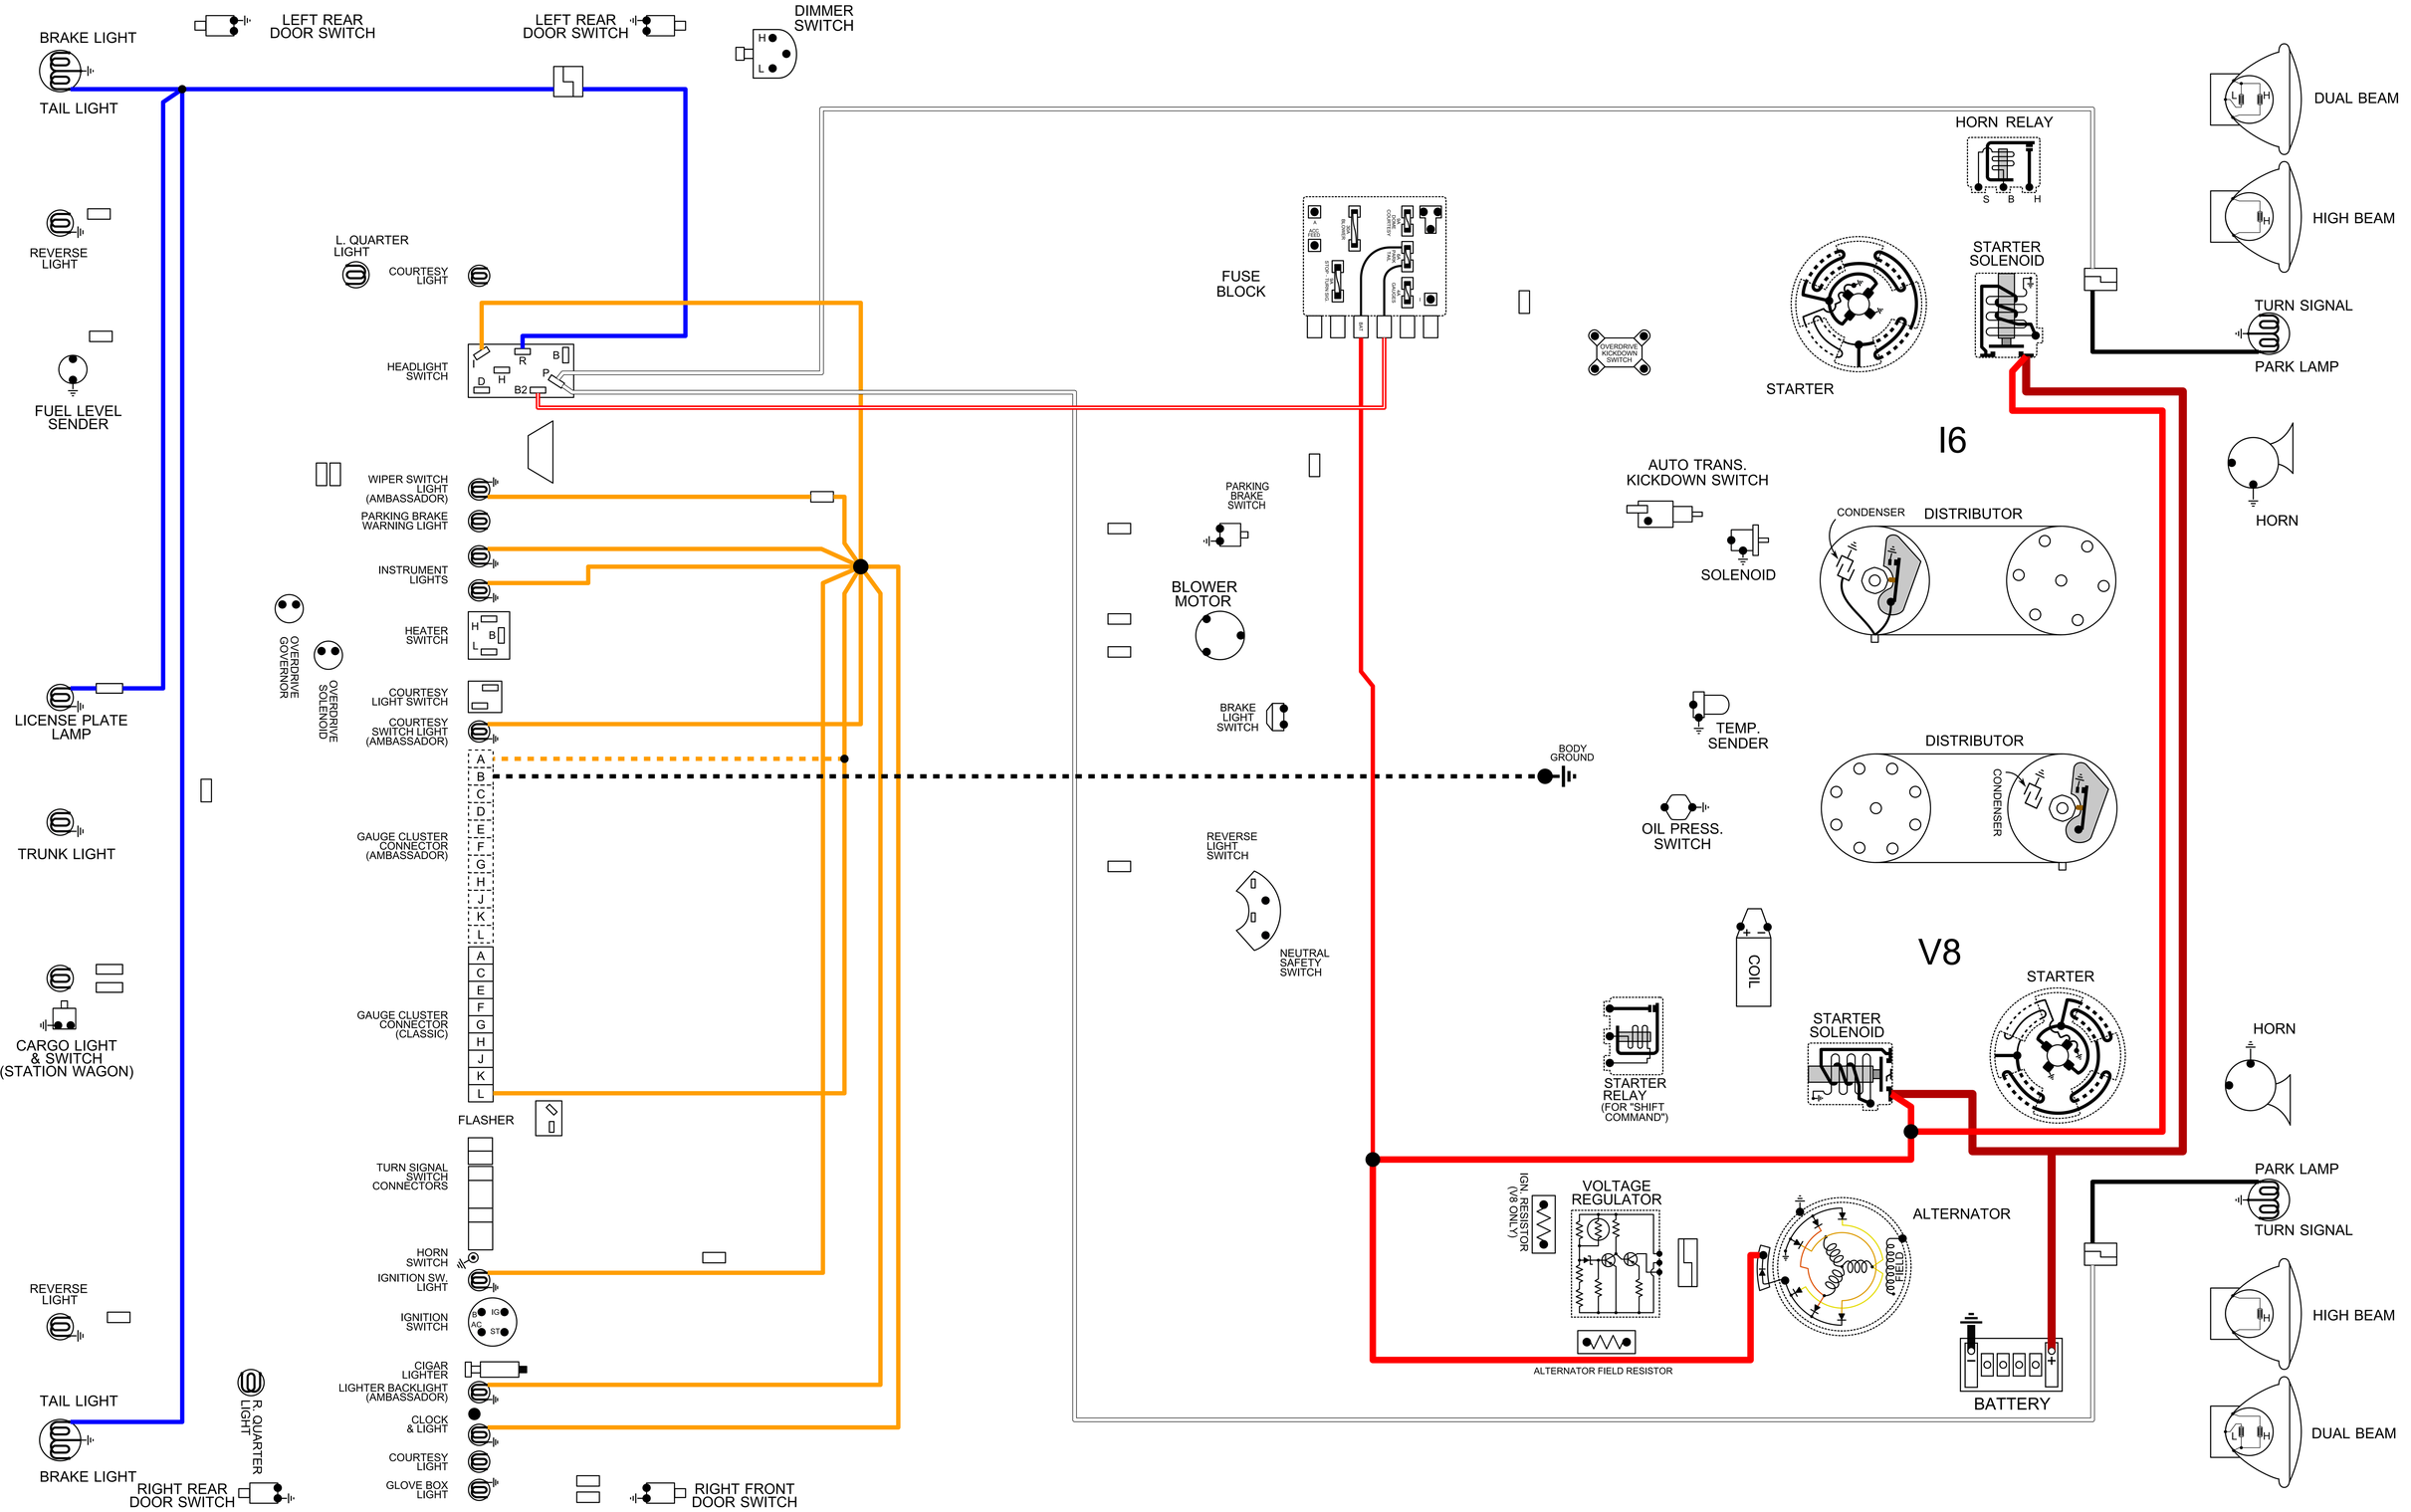

CINCO

1965 RAMBLER AMBASSADOR & CLASSIC


BRAKE LIGHTS

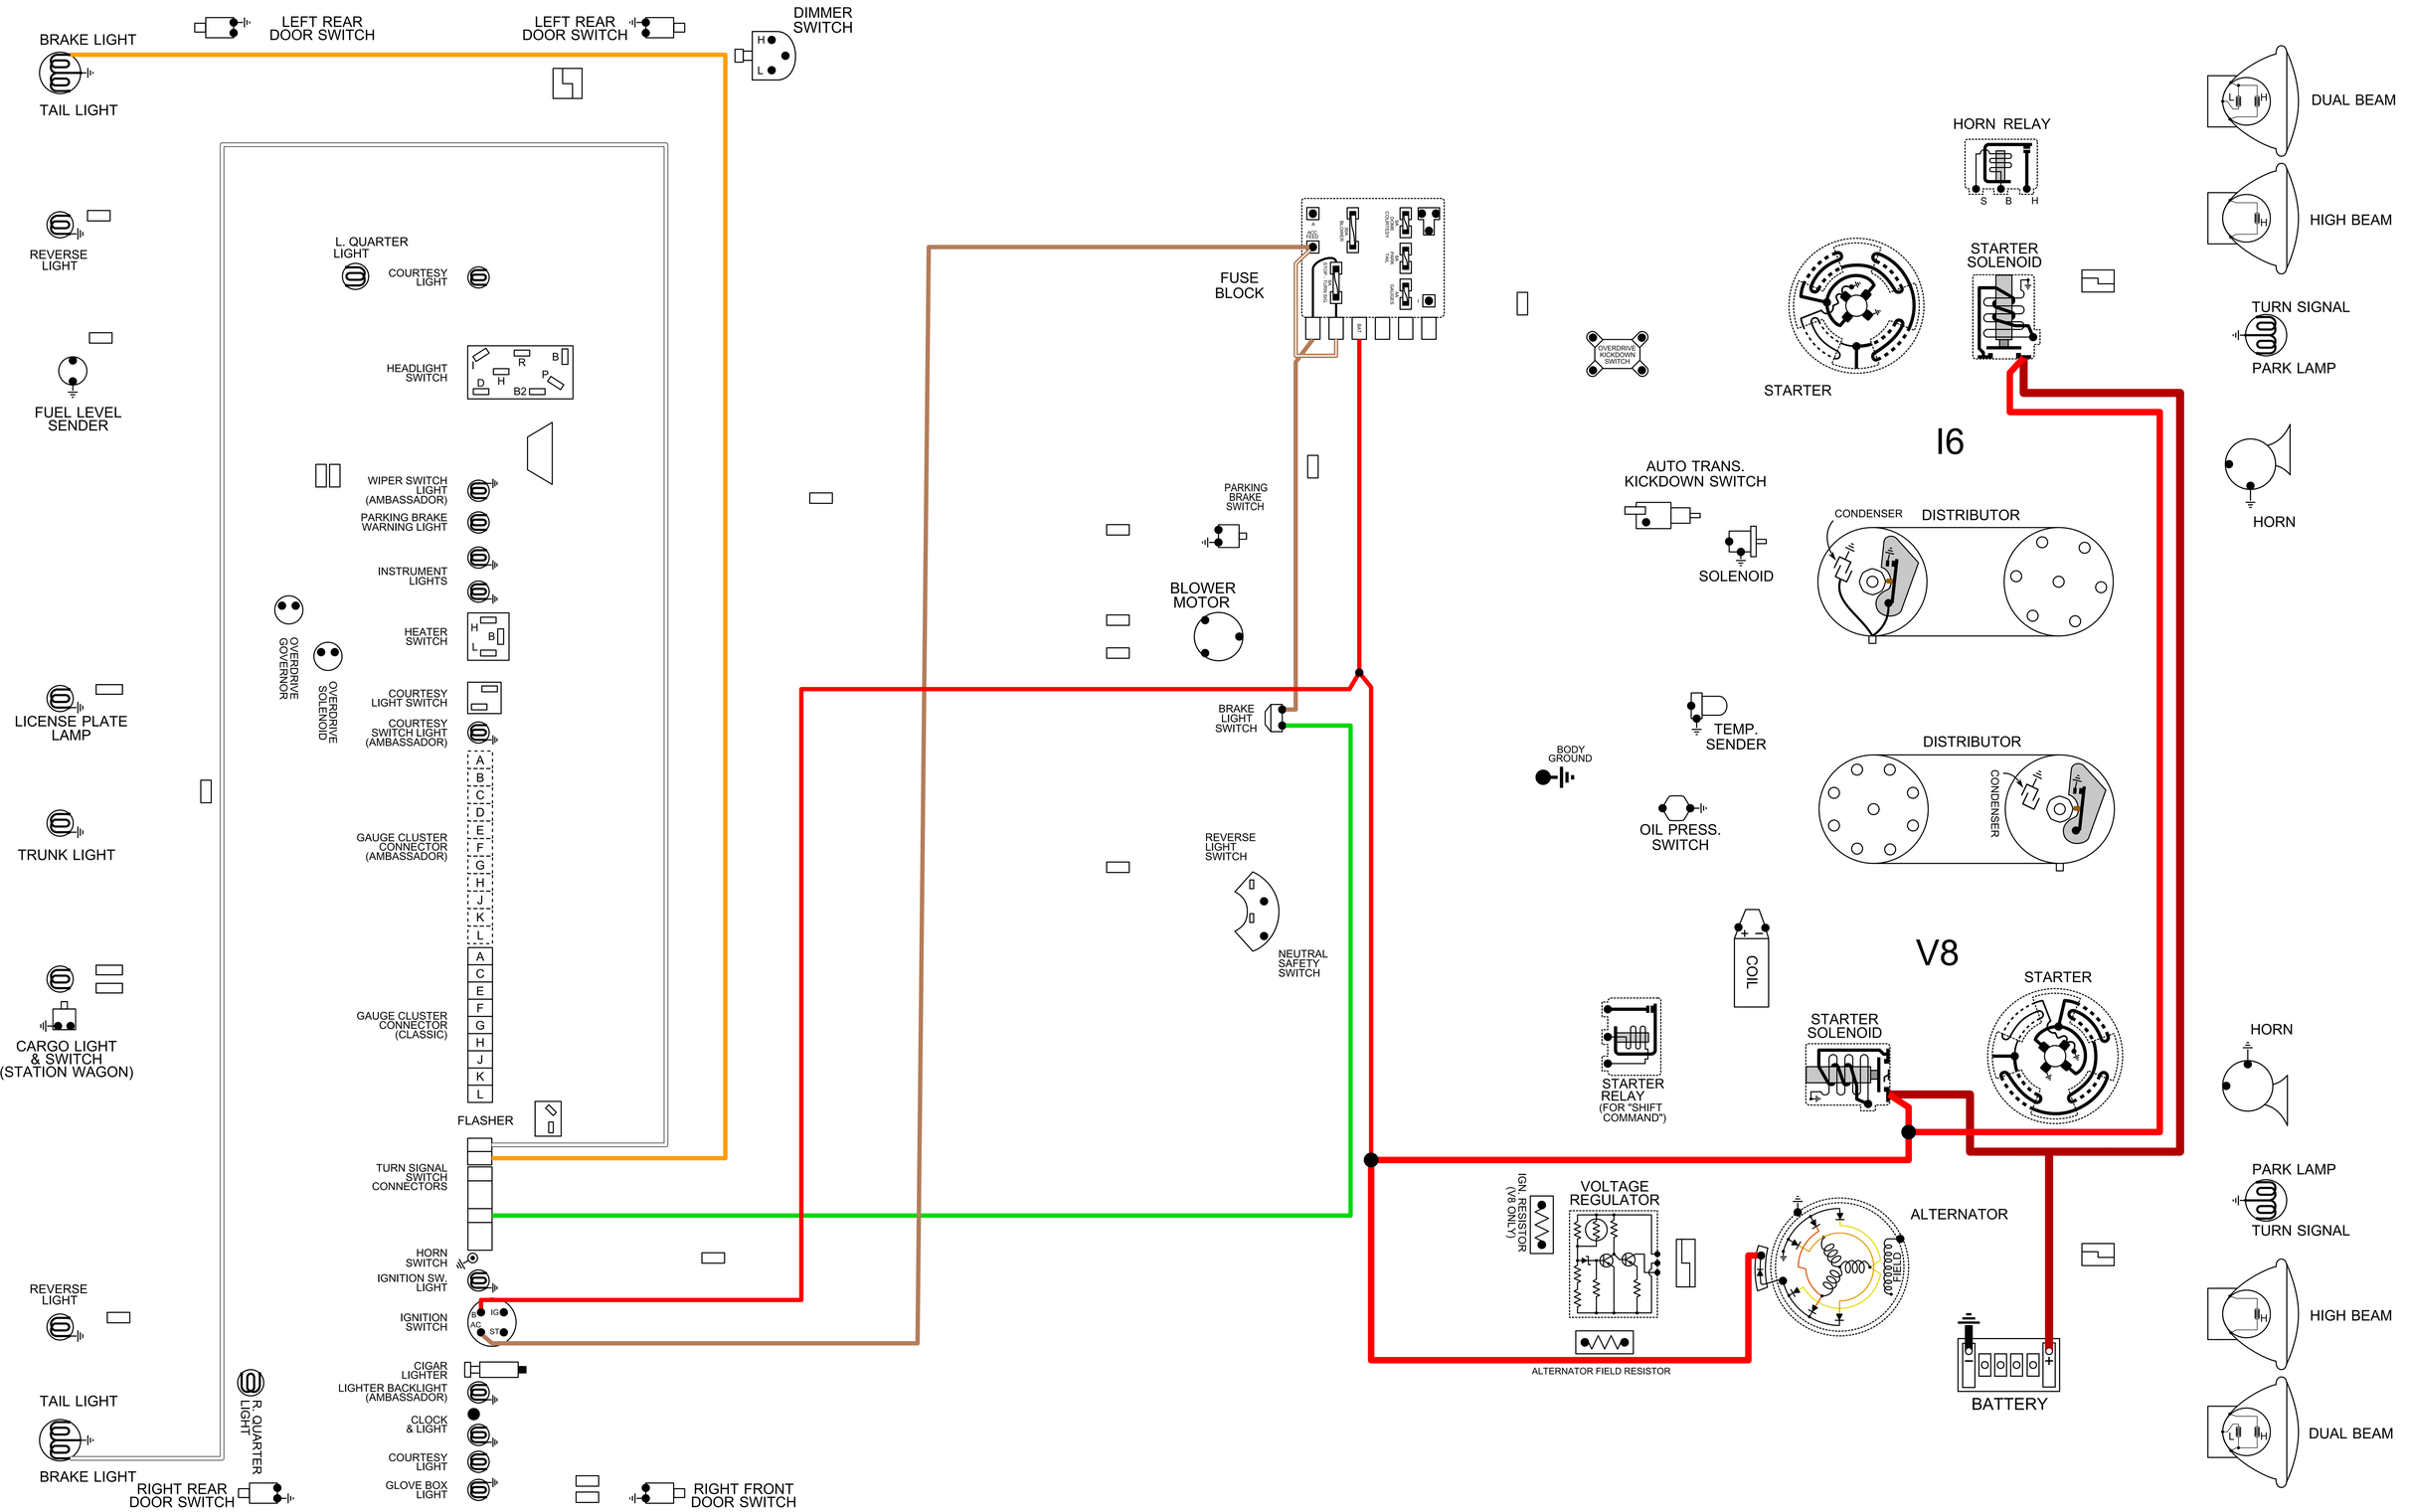


CINCO

1965 RAMBLER AMBASSADOR & CLASSIC

TURN SIGNALS

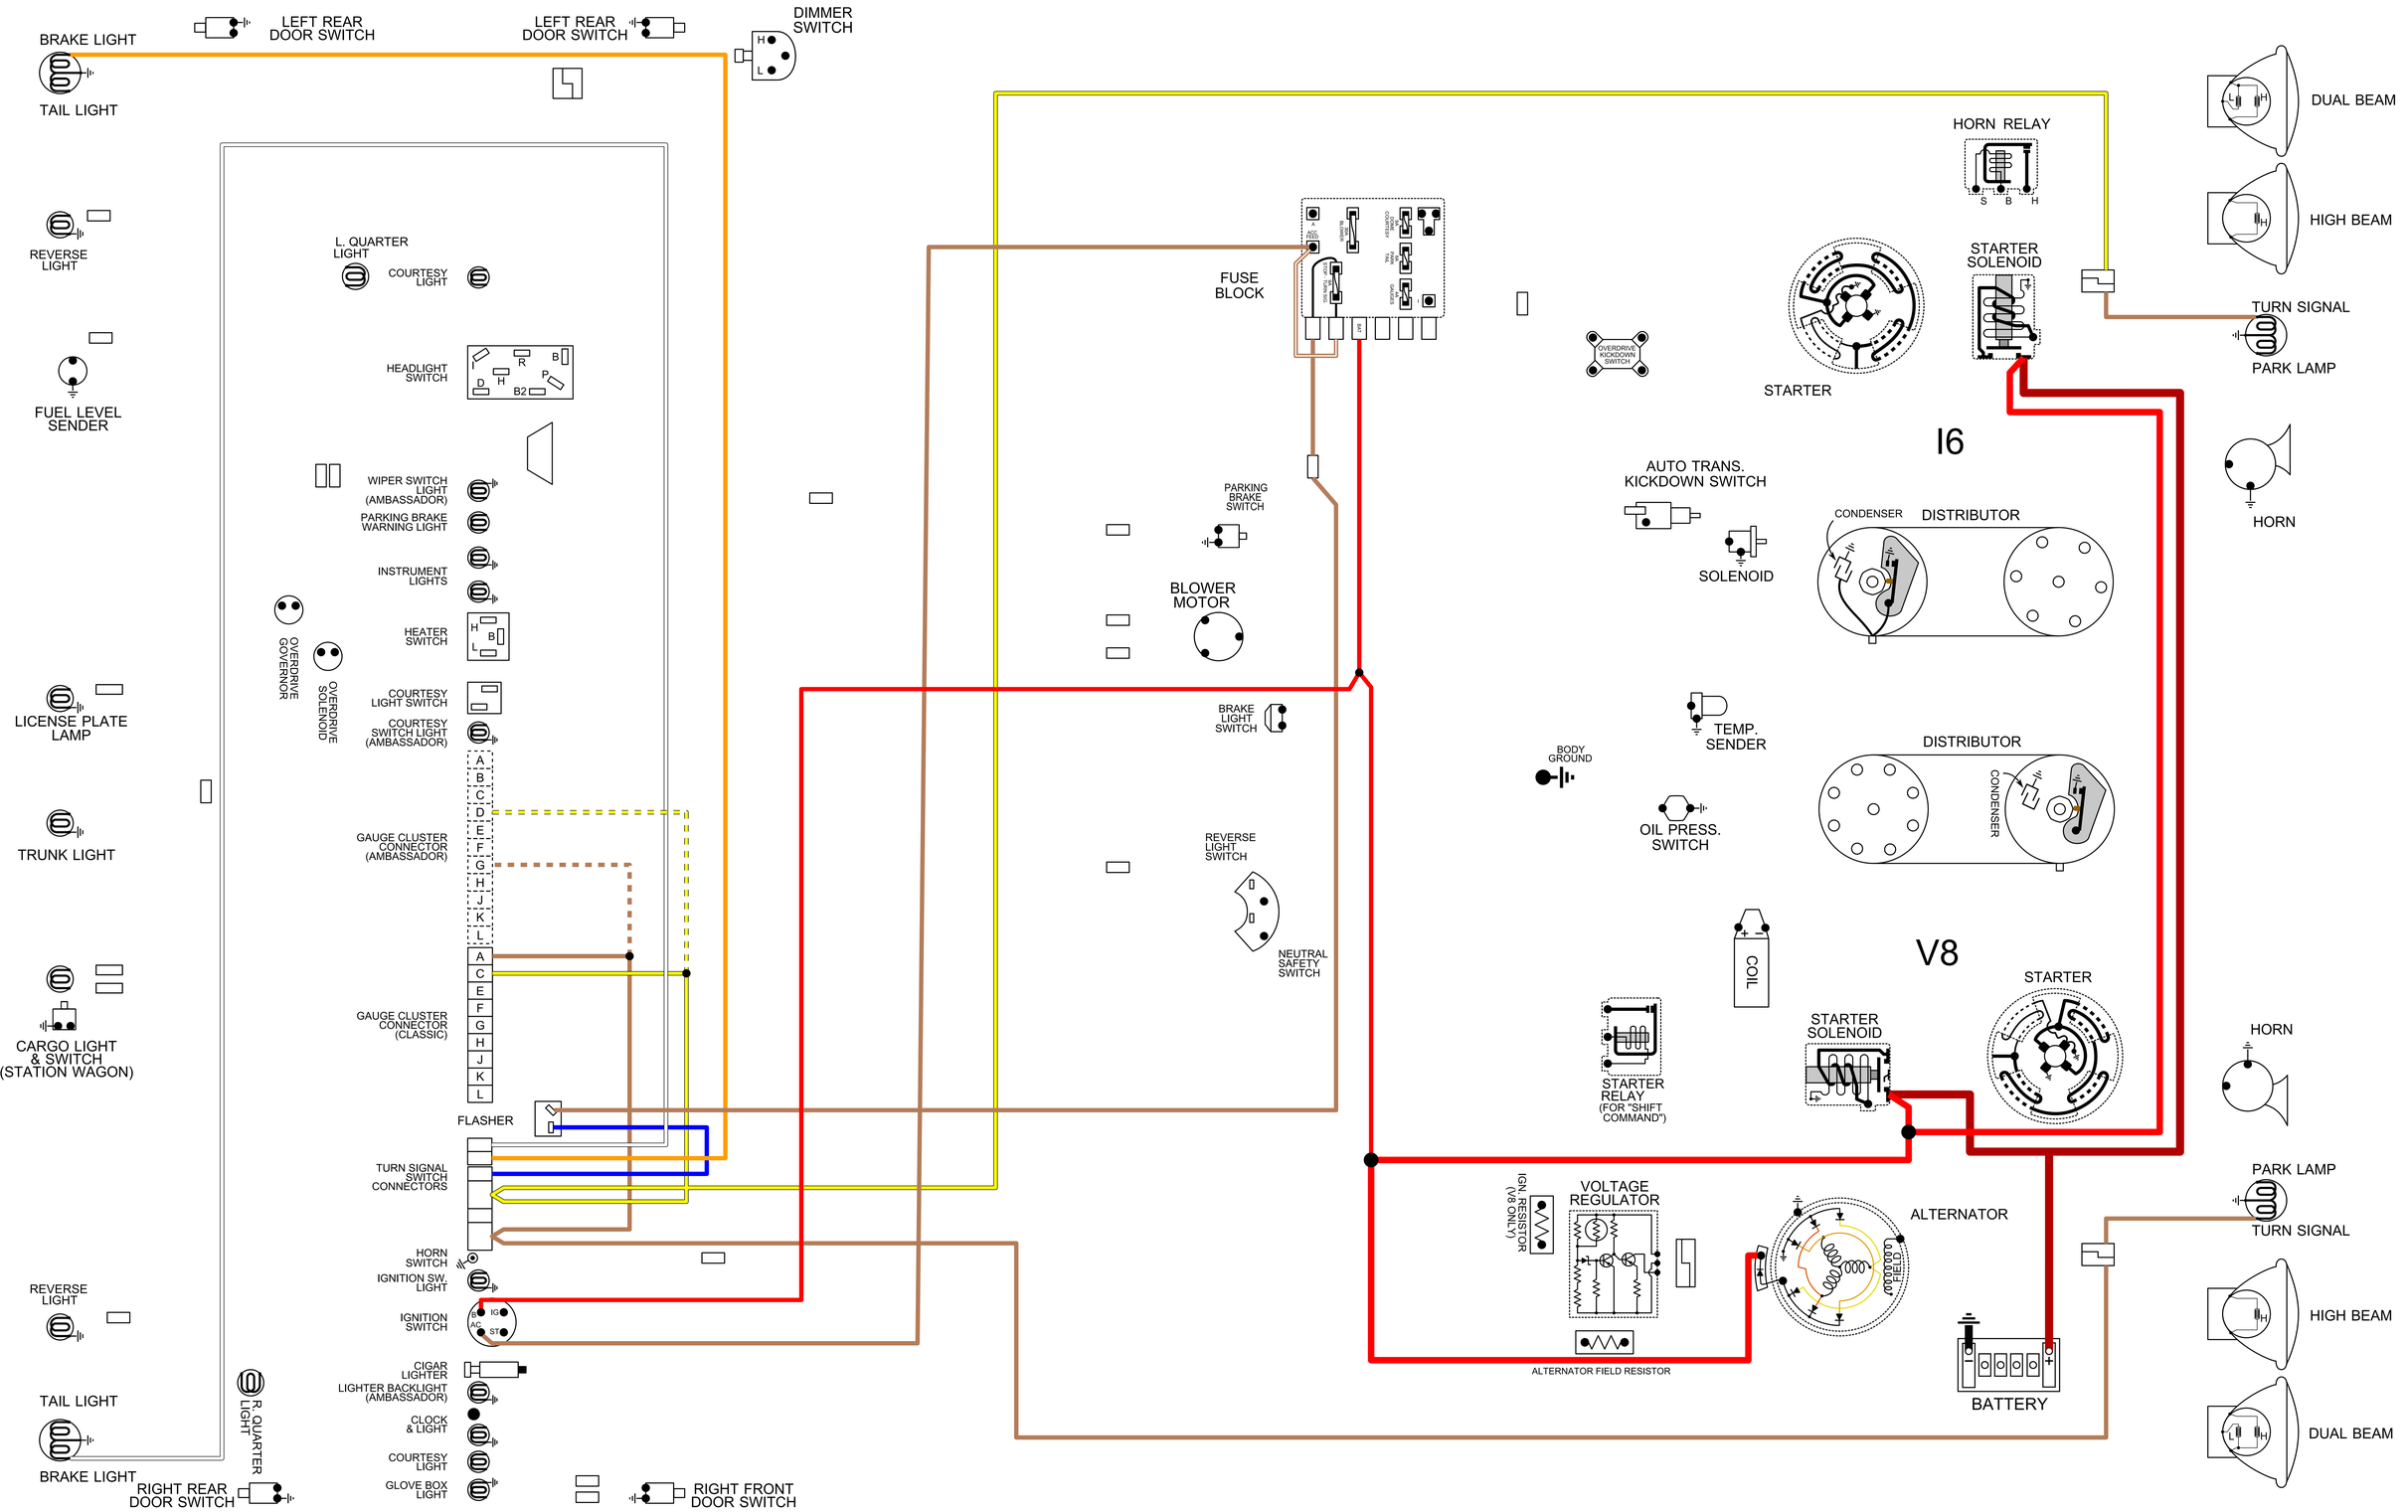


1965 RAMBLER AMBASSADOR & CLASSIC
HEATER

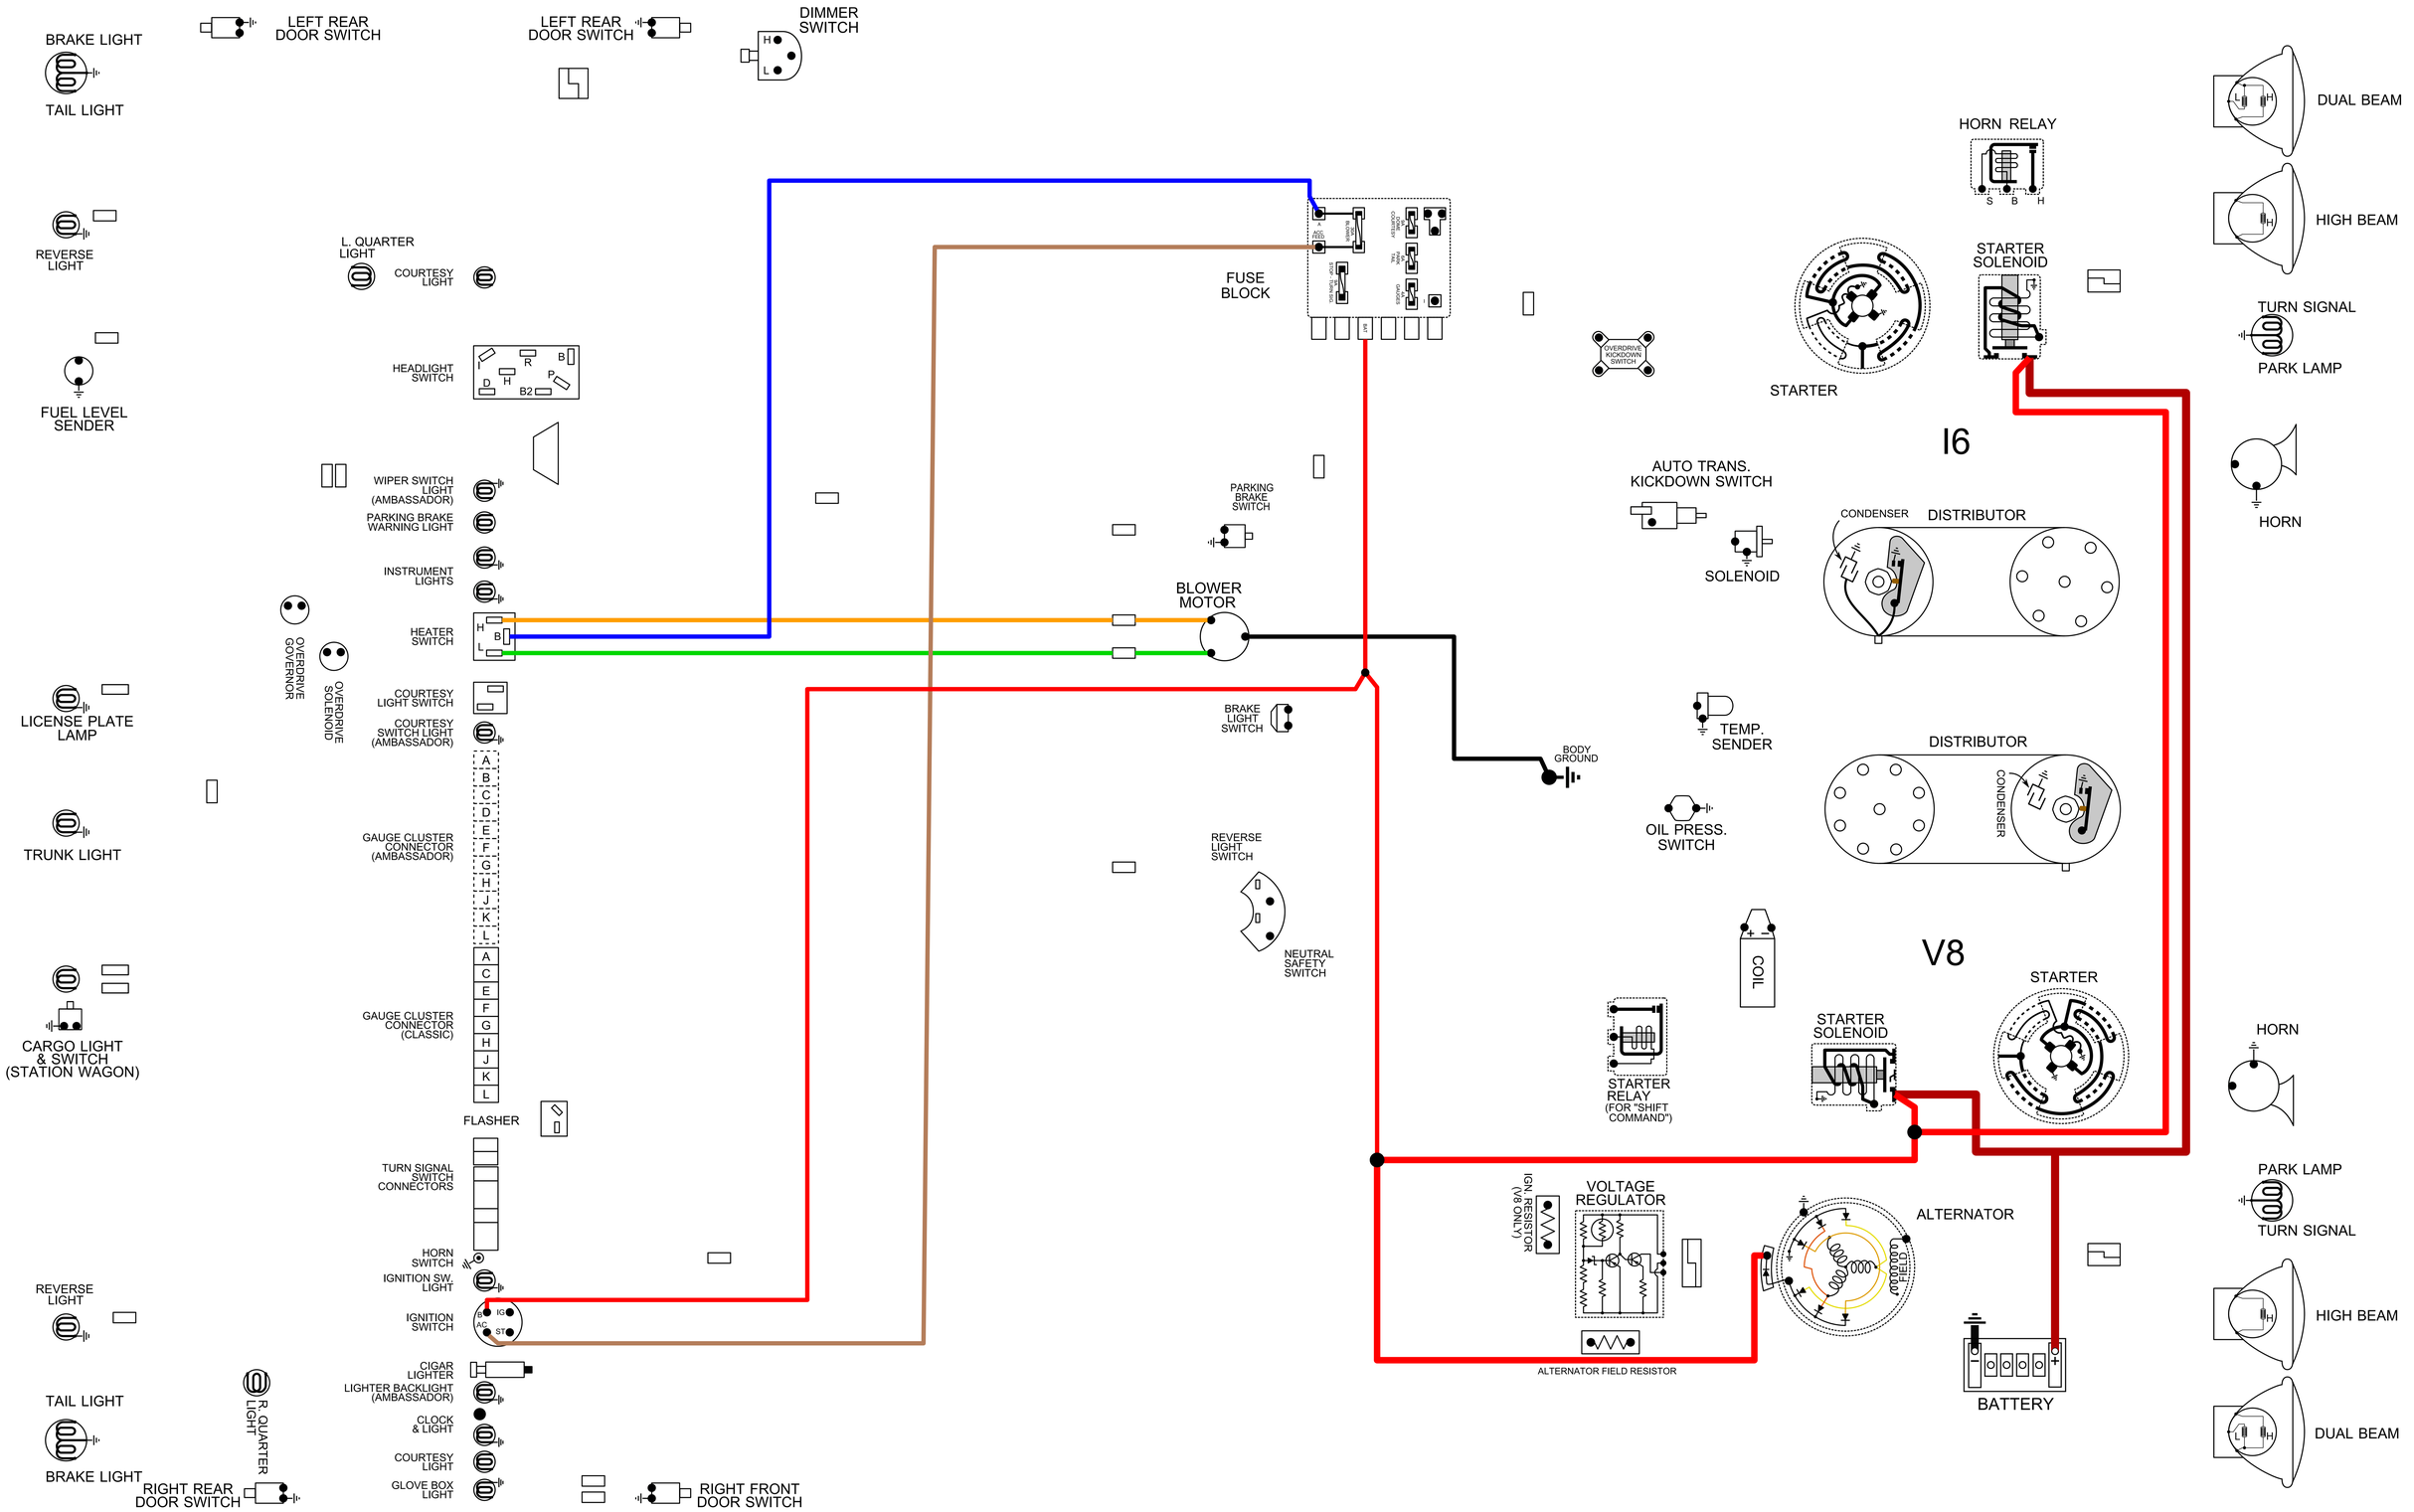


1965 RAMBLER AMBASSADOR & CLASSIC


HORN

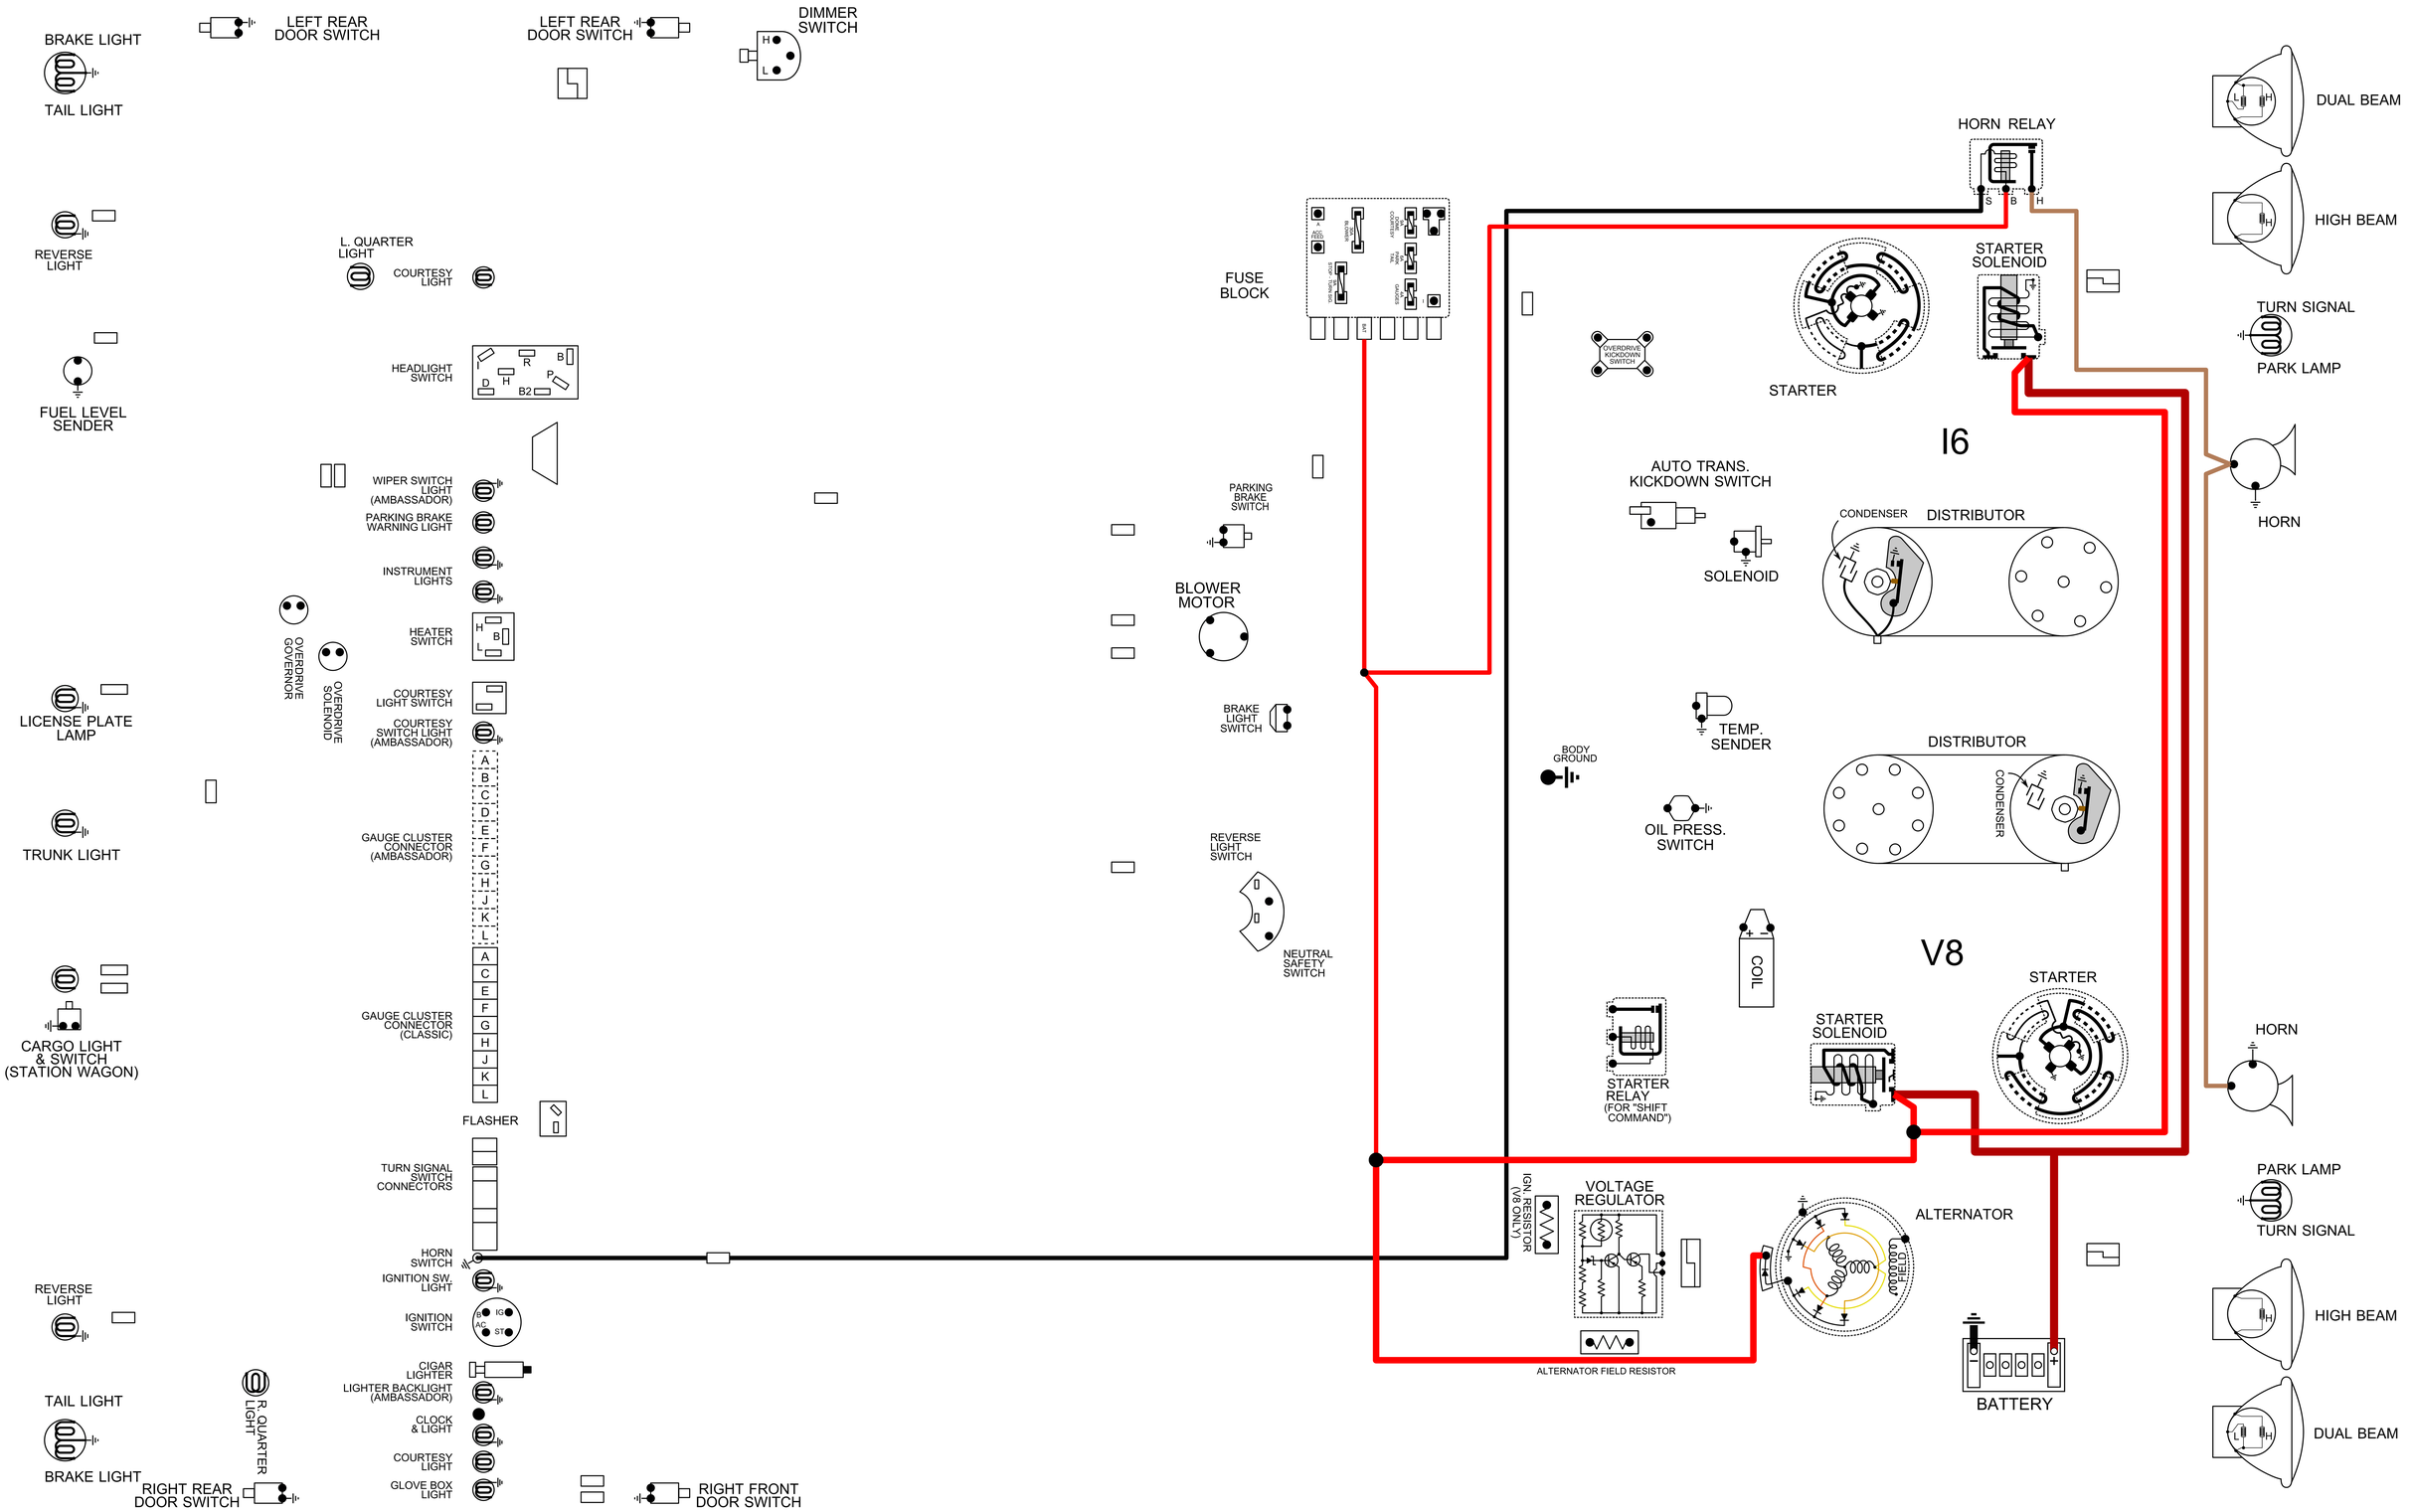

1965 RAMBLER AMBASSADOR & CLASSIC
TRANSMISSION

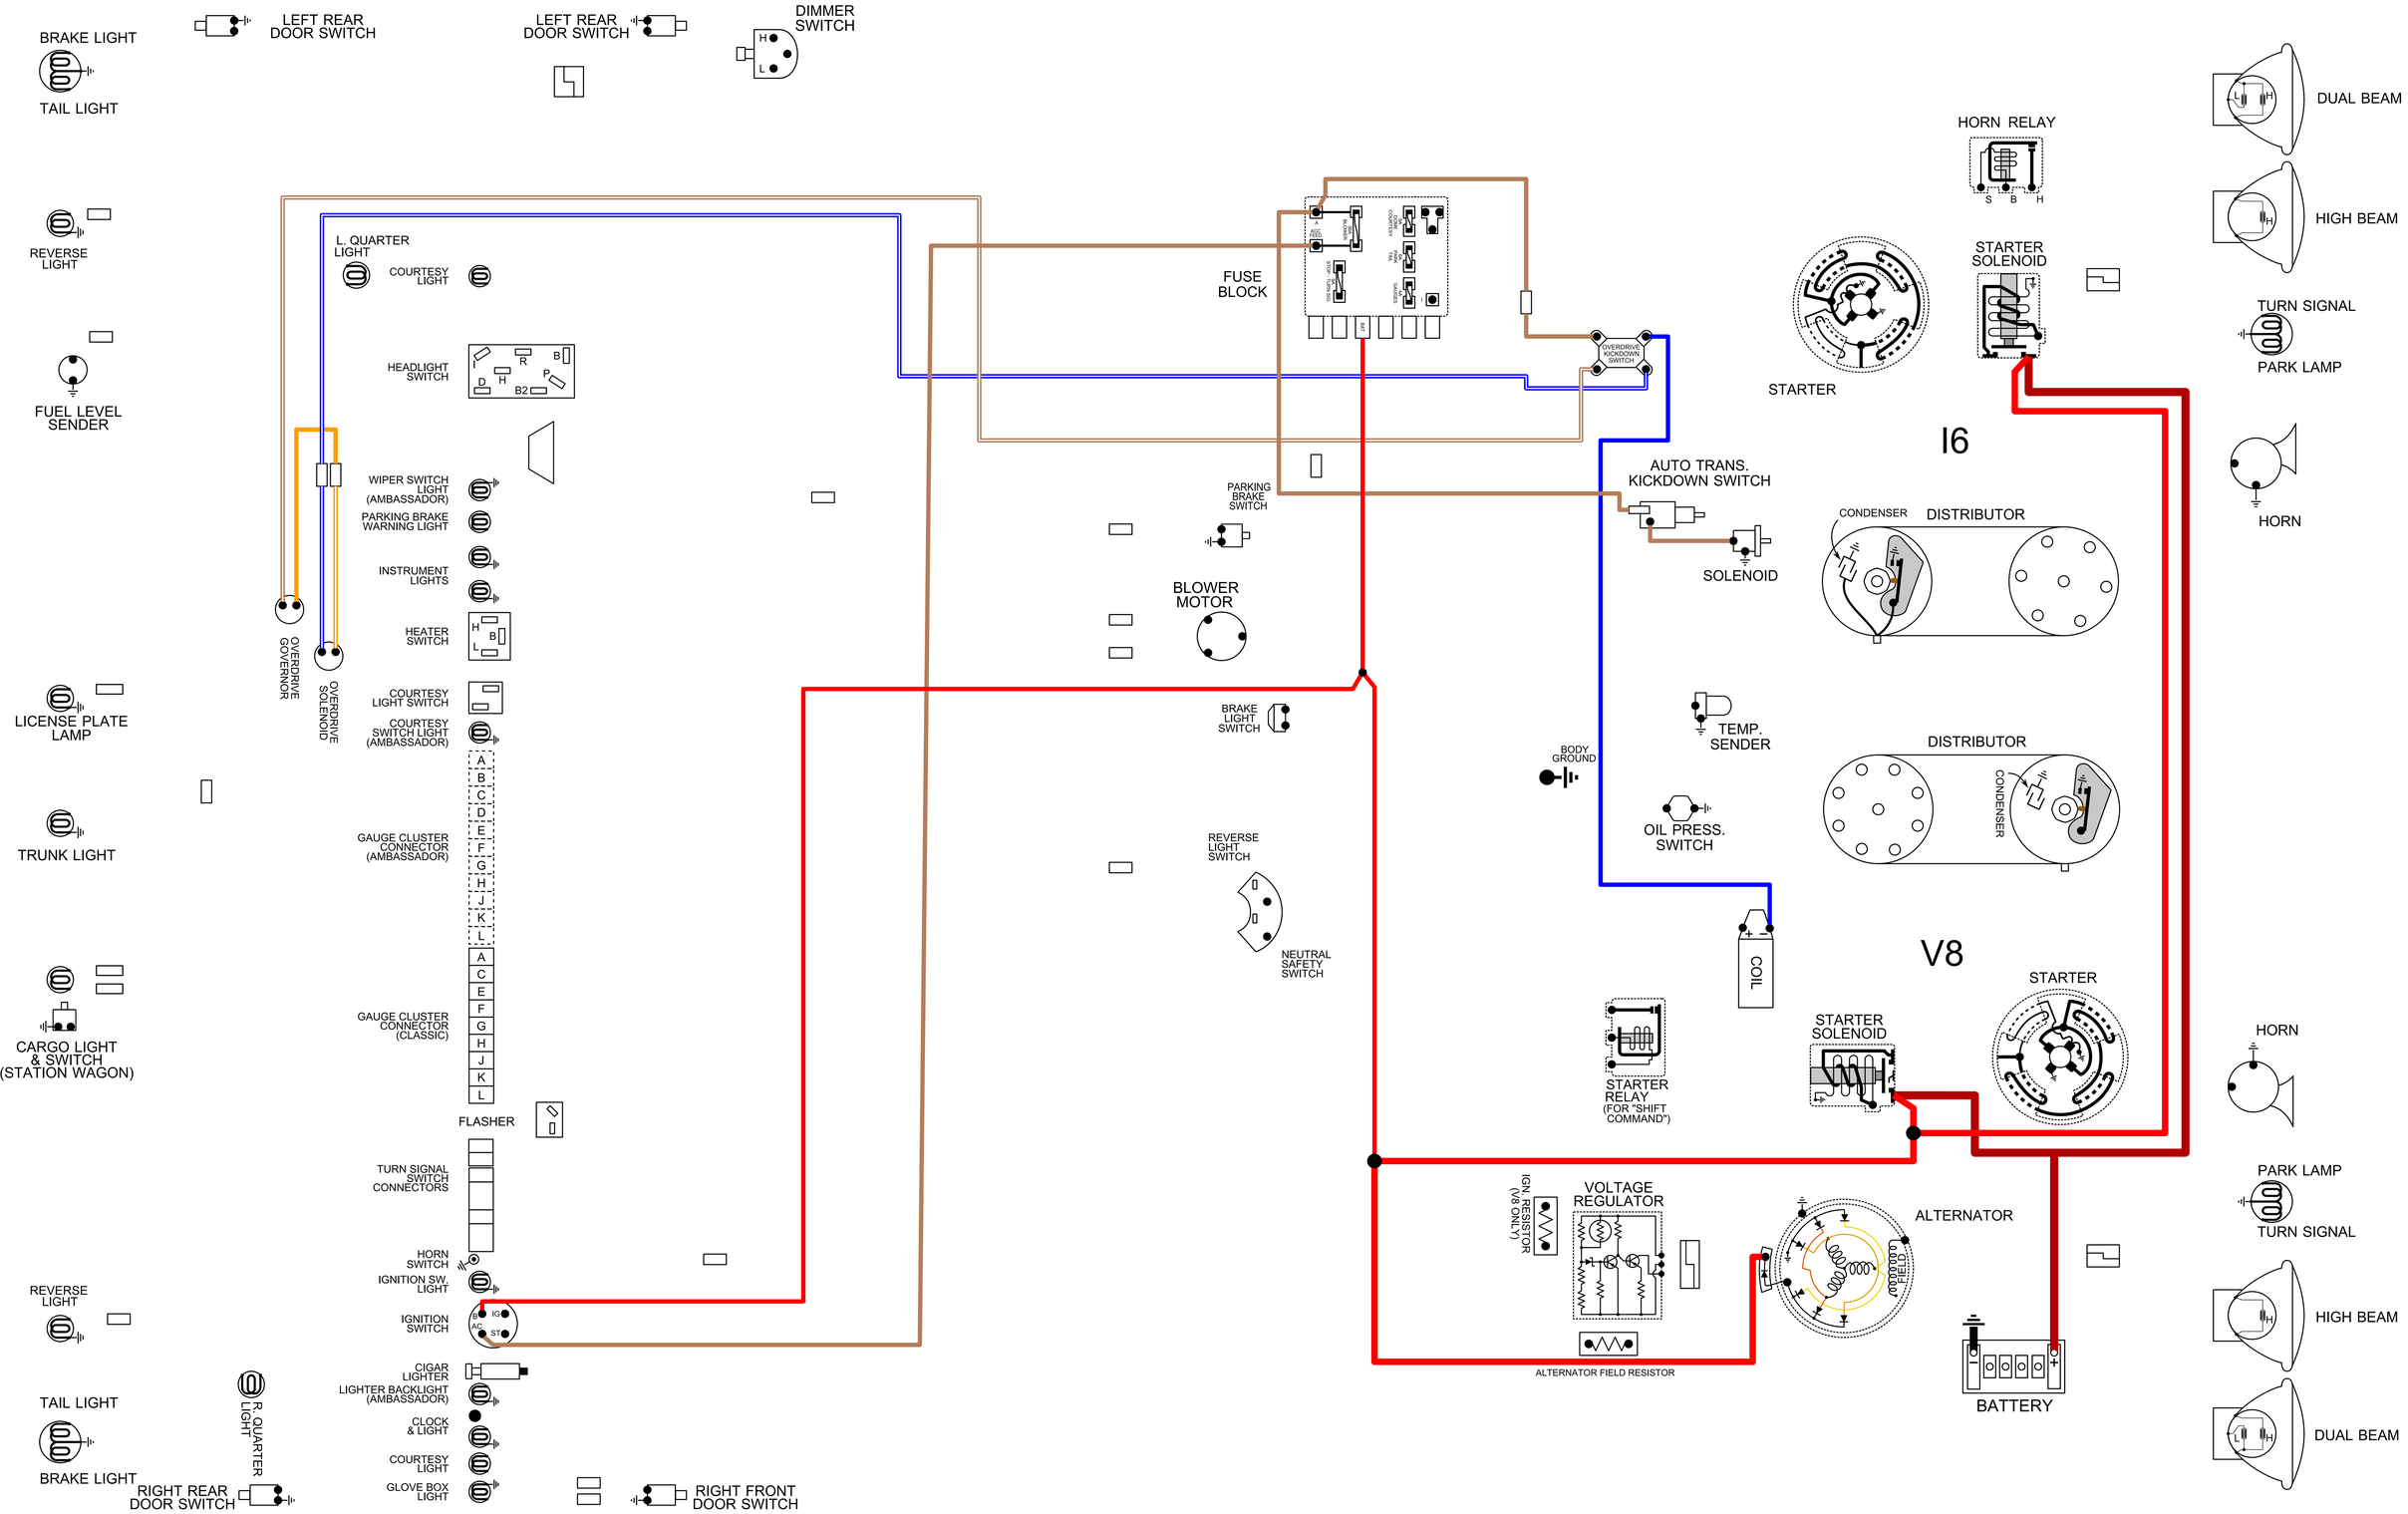


1965 RAMBLER AMBASSADOR & CLASSIC
GAUGES & WARNING LIGHTS

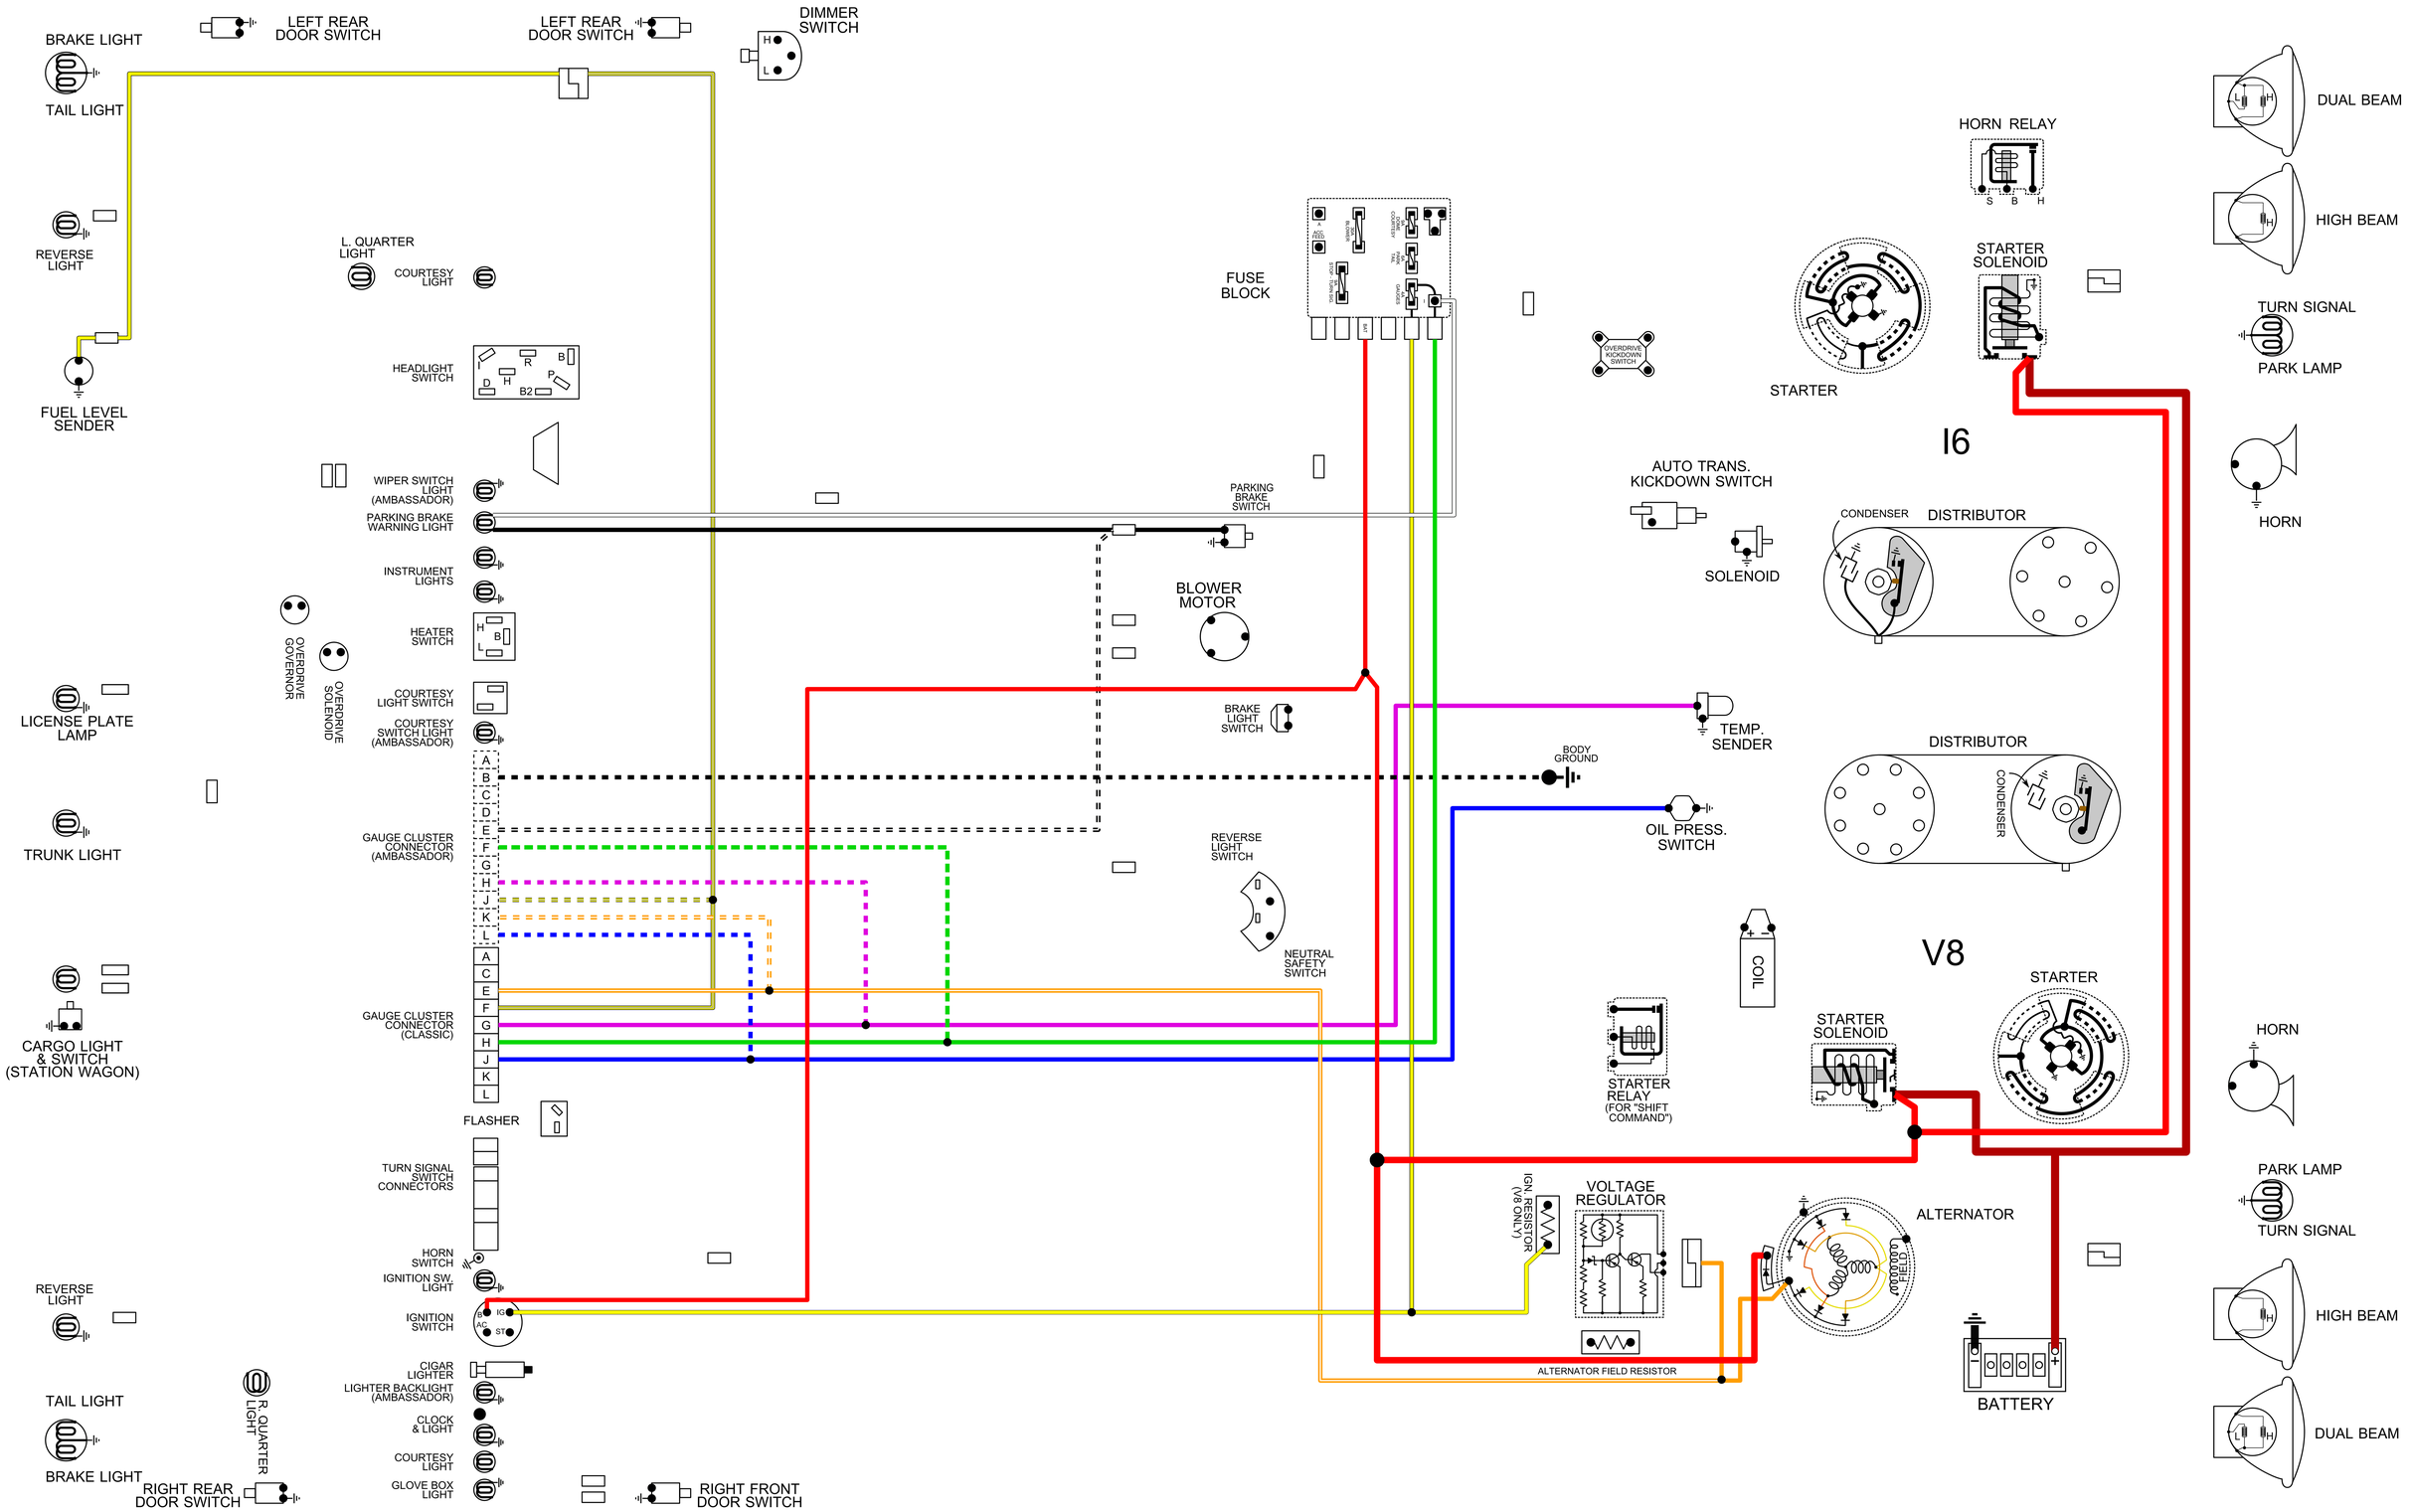

CINCO

1965 RAMBLER AMBASSADOR & CLASSIC


REVERSE LIGHTS

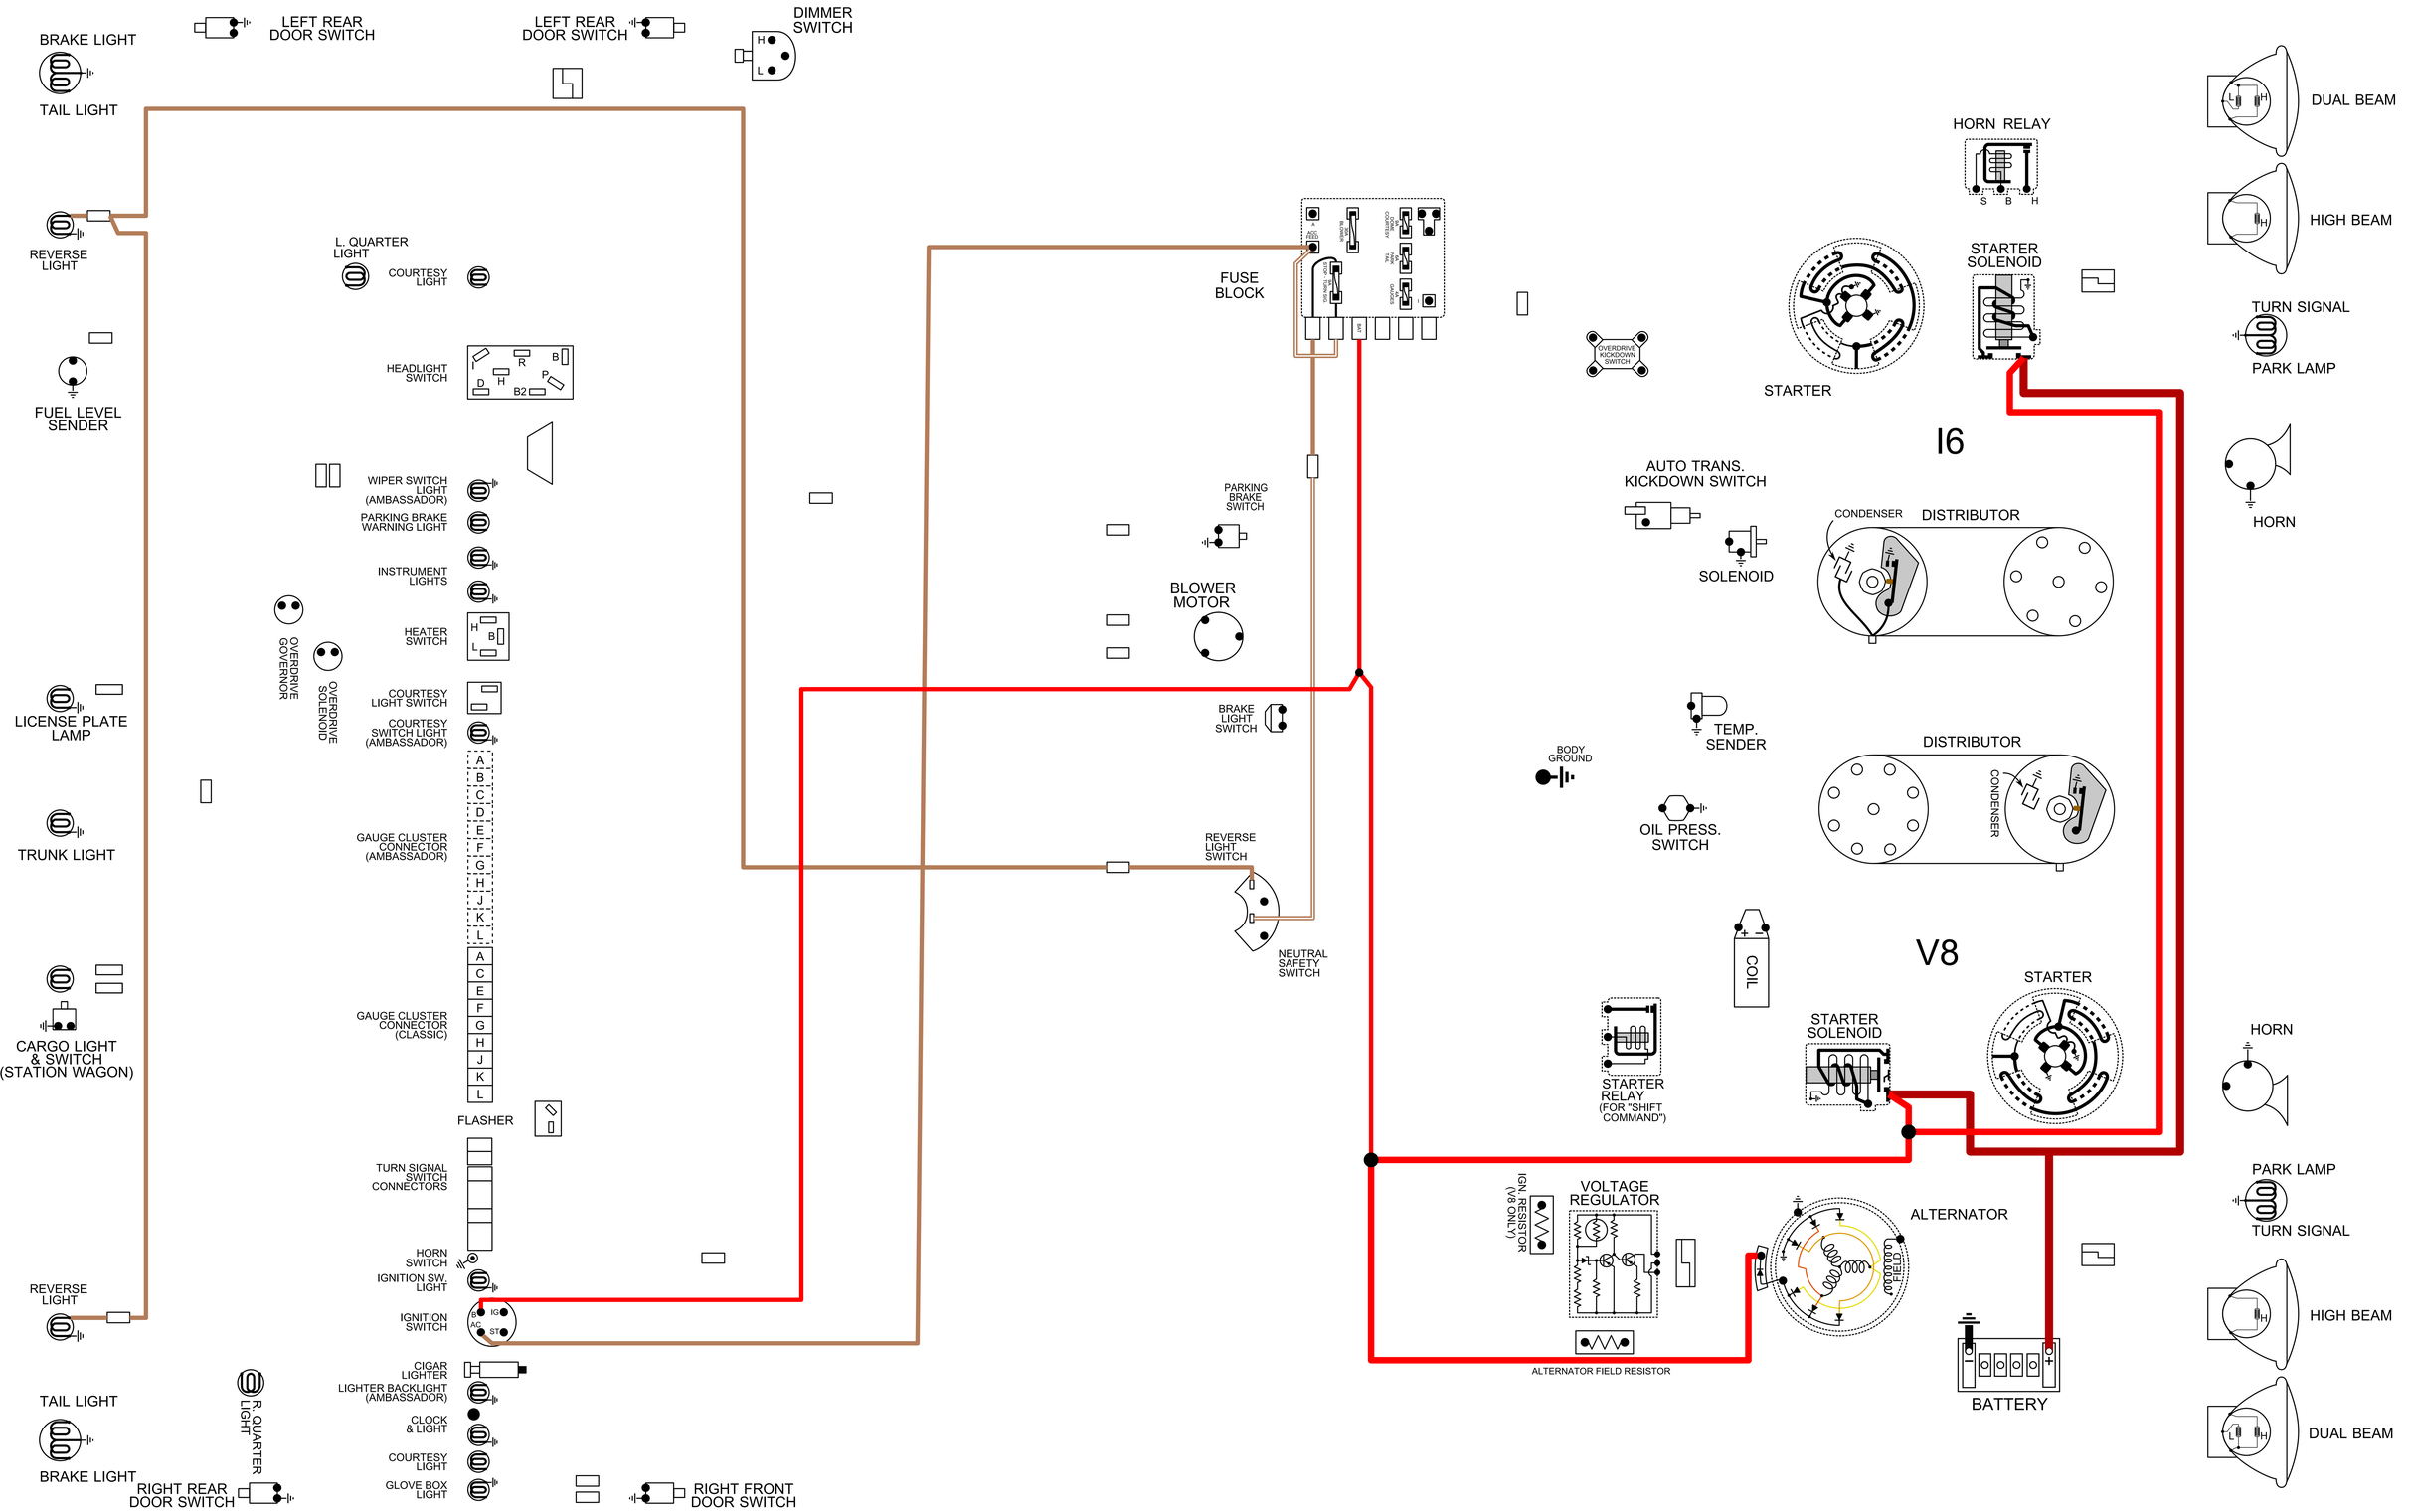

CINCO


1965 RAMBLER AMBASSADOR & CLASSIC

DOME & COURTESY LIGHTS

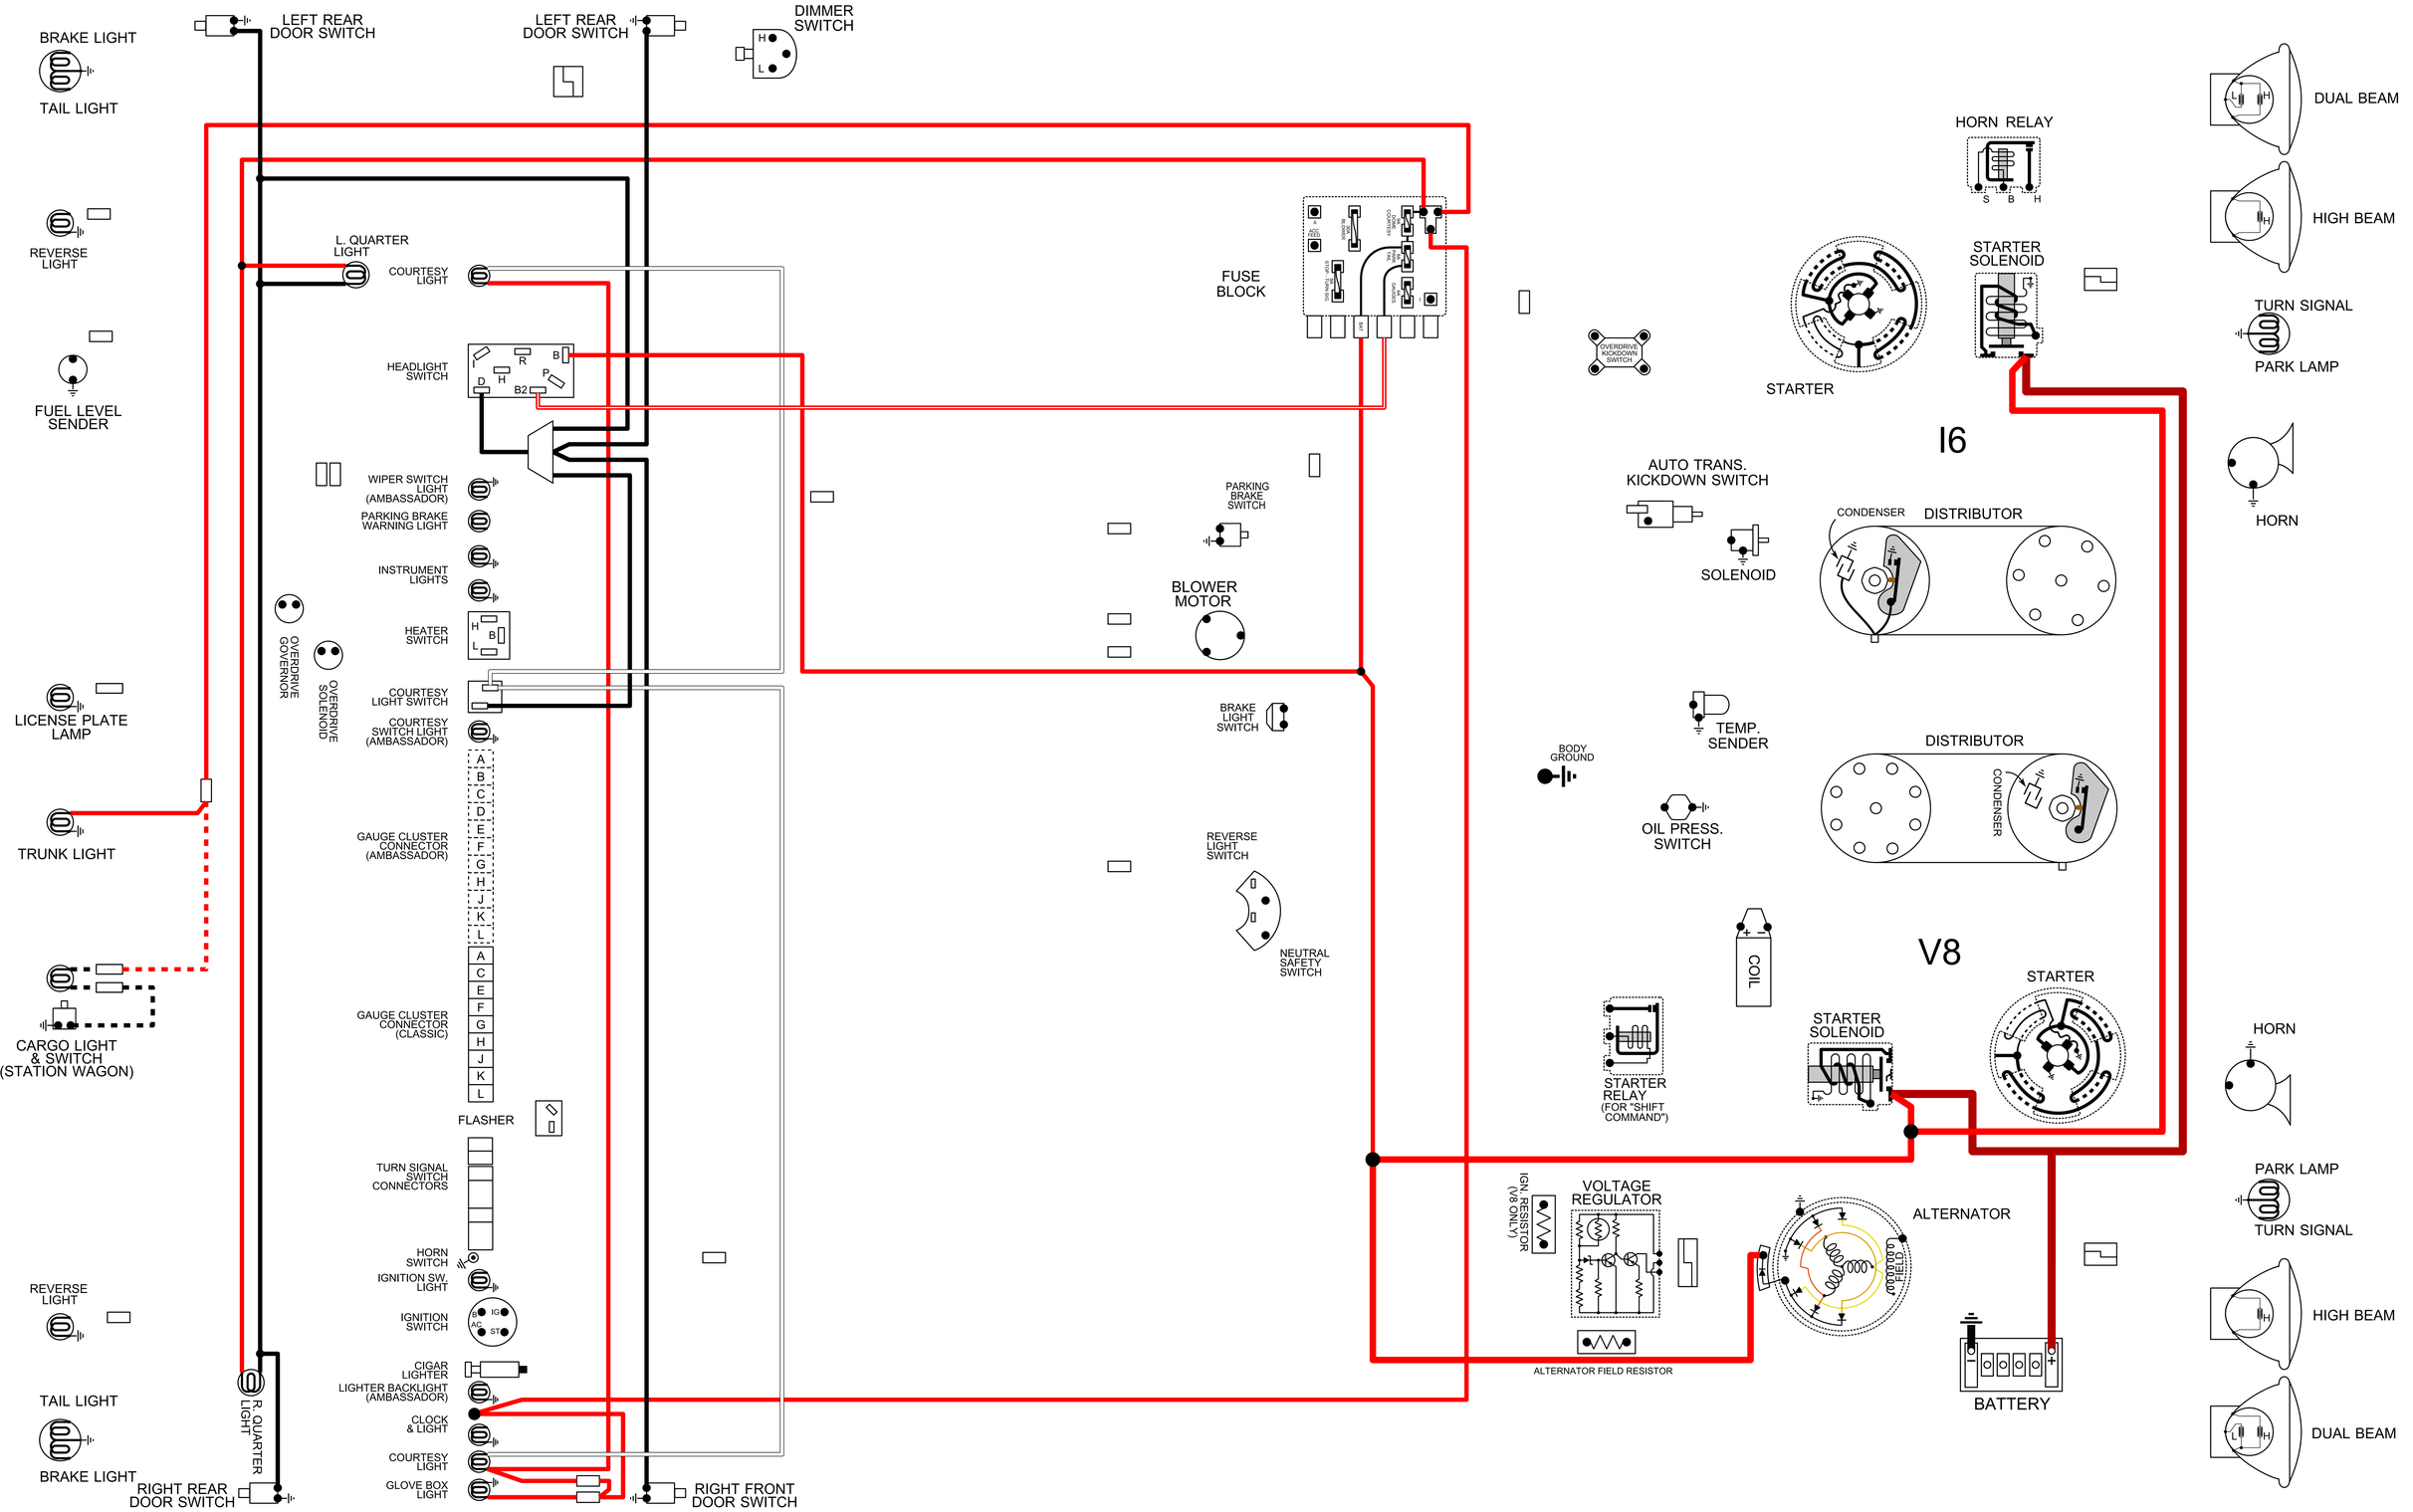

1965 RAMBLER AMBASSADOR & CLASSIC

1965 RAMBLER CLASSIC PCB

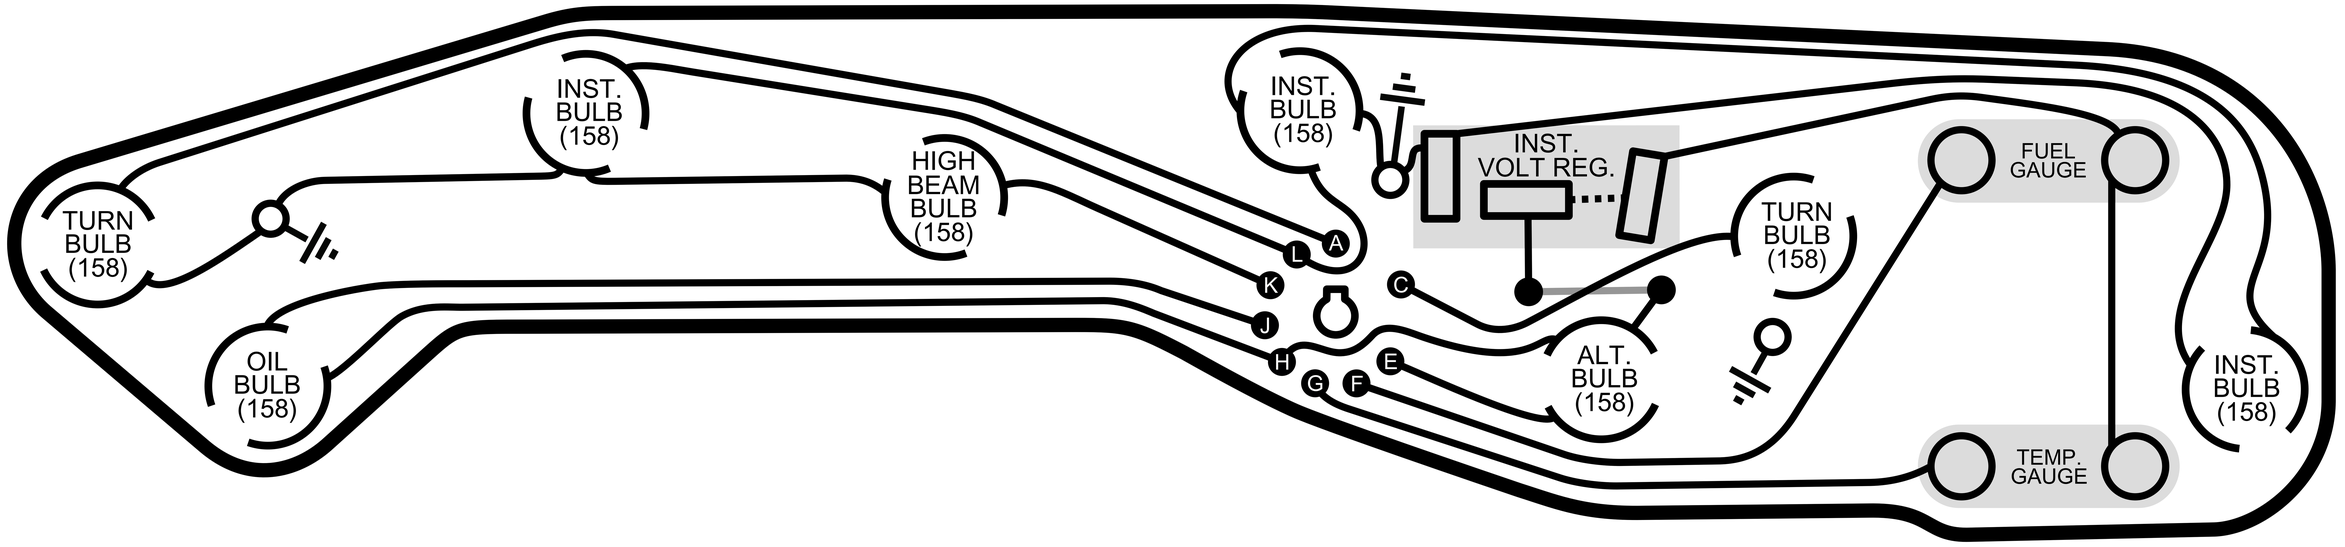

GAUGE CLUSTER

(VIEW FROM REAR)

A	TO TURN SIG. SWITCH (RIGHT)
C	TO TURN SIG. SWITCH (LEFT)
E	TO ALT. VOLTAGE REG. (CHARGE LAMP)
F	TO FUEL SENDER
G	TO TEMP. SENDER
H	TO FUSEBOX (IGN. POWER)
J	TO OIL PRESS. SWITCH
K	TO DIMMER SWITCH (HIGH BEAM IND.)
L	TO HEADLIGHT SWITCH (INST. LIGHTS)

NOTE:

I WAS UNABLE TO FIND A PHOTO OF AN AMBASSADOR PCB. SINCE MANY PINS ARE DIFFERENT FROM THE CLASSIC'S PCB, I BELIEVE THE AMBASSADOR PCB TO BE MATERIALLY DIFFERENT IN ITS LAYOUT.

CINCO